

Fuel Level Sensor

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

8. Fuel Level Sensor

A: REMOVAL

Refer to the FU (H4DOTC) section for removal procedure. <Ref. to FU(H4DOTC)-59, REMOVAL, Fuel Level Sensor.>

B: INSTALLATION

Refer to the FU (H4DOTC) section for installation procedure. <Ref. to FU(H4DOTC)-59, INSTALLATION, Fuel Level Sensor.>