

Fuel Sub Level Sensor

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

10. Fuel Sub Level Sensor

A: REMOVAL

Refer to the FU (H4DOTC) section for removal procedure. <Ref. to FU(H4DOTC)-60, REMOVAL, Fuel Sub Level Sensor.>

B: INSTALLATION

Refer to the FU (H4DOTC) section for installation procedure. <Ref. to FU(H4DOTC)-60, INSTALLATION, Fuel Sub Level Sensor.>