

# Engine Coolant Temperature Sensor


FUEL INJECTION (FUEL SYSTEMS)

---

## 4. Engine Coolant Temperature Sensor

### A: REMOVAL

1) Disconnect the ground cable from the battery.

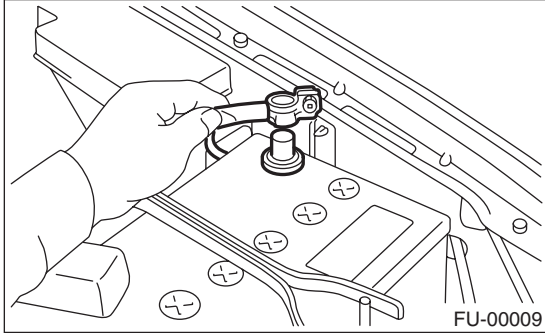


2) Remove the collector cover.

3) Remove the generator. <Ref. to SC (H4SO)-14, REMOVAL, Generator.>

4) Drain the engine coolant. <Ref. to CO(H4SO)-18, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>

5) Disconnect the connectors from the engine coolant temperature sensor.

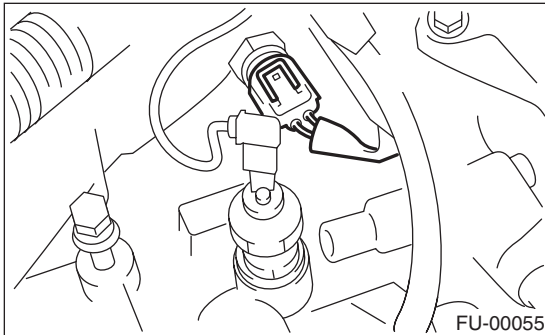

6) Remove the engine coolant temperature sensor.

### B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Use a new gasket.

**Tightening torque:**

**18 N·m (1.8 kgf·m, 13.3 ft·lb)**