


# Crankshaft Position Sensor

FUEL INJECTION (FUEL SYSTEMS)


## 5. Crankshaft Position Sensor

### A: REMOVAL


- 1) Disconnect the ground cable from the battery.

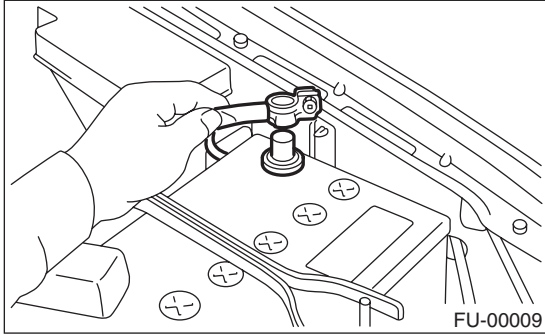

- 2) Remove the collector cover.
- 3) Remove the bolt which installs crankshaft position sensor to cylinder block.

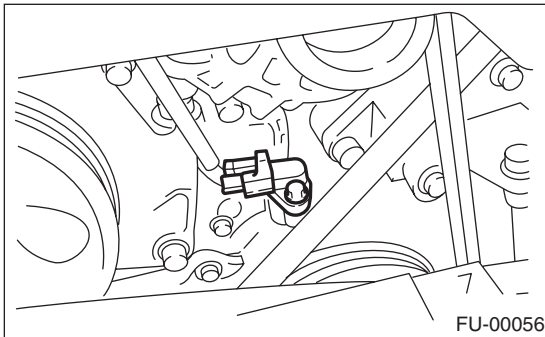

- 4) Remove the crankshaft position sensor, and then disconnect the connector from it.

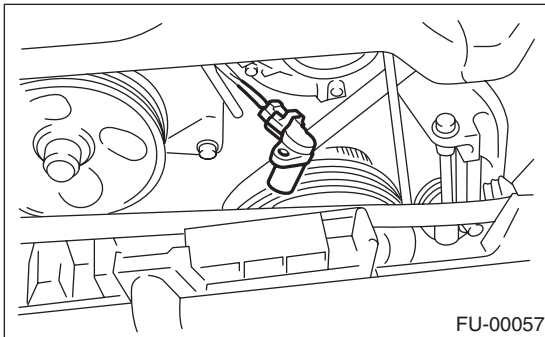

### B: INSTALLATION

Install in the reverse order of removal.

**Tightening torque:**

**T: 6.4 N·m (0.65 kgf-m, 4.7 ft-lb)**

