


Fuel Pump Control Unit

FUEL INJECTION (FUEL SYSTEMS)

21. Fuel Pump Control Unit

A: REMOVAL


1) Disconnect the ground cable from the battery.

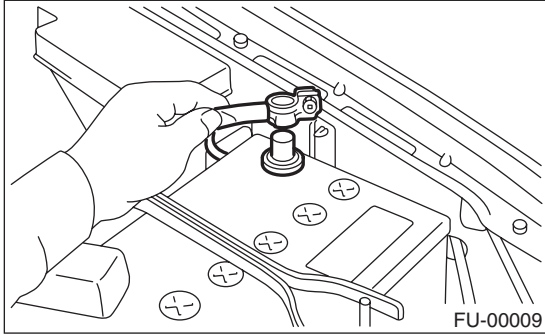

2) Remove the rear quarter trim. <Ref. to EI-44, REMOVAL, Rear Quarter Trim.>

3) Disconnect the connector from fuel pump control unit.

4) Remove the fuel pump control unit.

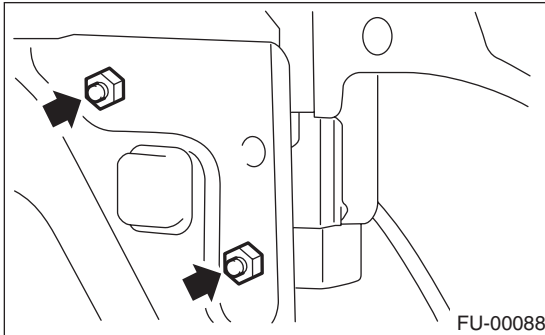

B: INSTALLATION

Install in the reverse order of removal.