

26. Fuel Level Sensor

A: REMOVAL

WARNING:

Place “NO FIRE” signs near the working area.


CAUTION:

Be careful not to spill fuel.


NOTE:

The fuel level sensor is built in fuel pump assembly.

- 1) Remove the fuel pump assembly.
<Ref. to FU(H4DOTC)-57, REMOVAL, Fuel Pump.>
- 2) Disconnect the connector from fuel pump bracket.

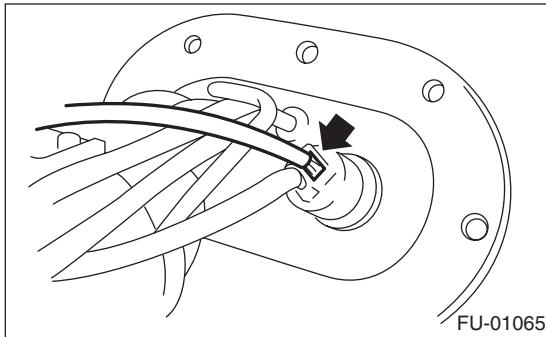

- 3) Remove the fuel temperature sensor (A).
- 4) Remove the bolt (B) which installs the fuel level sensor on the mounting bracket.

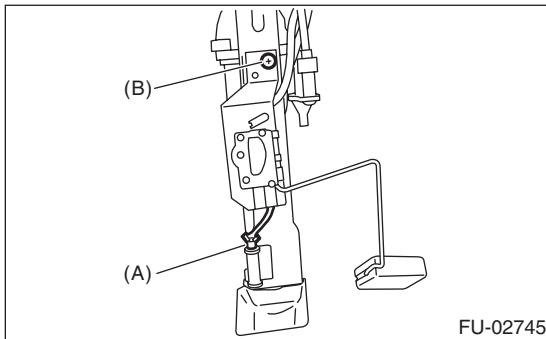

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Use a new gasket.

Tightening torque:

4.4 N·m (0.45 kgf-m, 3.3 ft-lb)