

# Fuel Cut Valve

## FUEL INJECTION (FUEL SYSTEMS)

### 29. Fuel Cut Valve

#### A: REMOVAL


##### CAUTION:

- Be careful not to spill fuel.
- Catch the fuel from hoses using a container or cloth.


1) Remove the fuel tank.

<Ref. to FU(H4DOTC)-50, REMOVAL, Fuel Tank.>

2) Remove the protect cover.

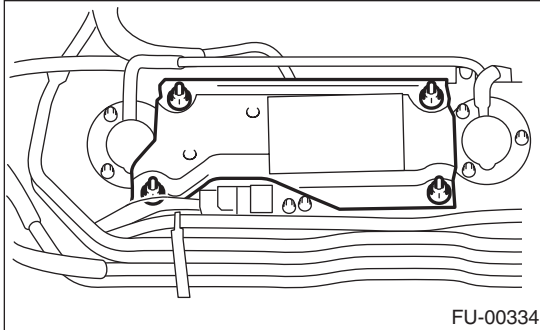

3) Loosen the clip and disconnect the evaporation hose from the fuel cut valve.

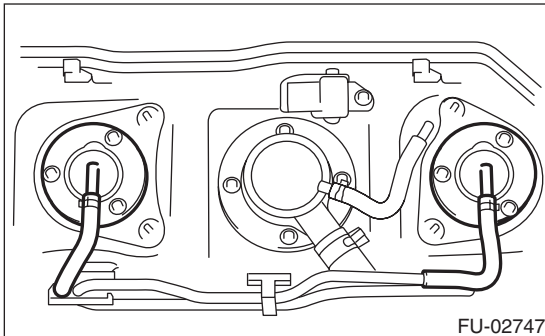

4) Remove the bolts which install the fuel cut valve.

#### B: INSTALLATION

Install in the reverse order of removal while being careful of the following.

- Make sure the sealing portion is free from fuel or foreign matter before installation.

##### NOTE:

Use a new gasket.

##### **Tightening torque:**

**4.4 N·m (0.45 kgf-m, 3.3 ft-lb)**

