

# Fuel System Trouble in General

FUEL INJECTION (FUEL SYSTEMS)

## 32. Fuel System Trouble in General

### A: INSPECTION

Trouble and possible cause		Corrective action
<b>1. Insufficient fuel supply to injector</b>		
1)	Fuel pump does not operate.	
	○ Defective terminal contact	Inspect contact, especially ground, and tighten it securely.
	○ Trouble in electromagnetic or electronic circuit parts	Replace the faulty part.
2)	Decline of fuel pump function	Replace the fuel pump.
3)	Clogged fuel filter	Replace the fuel filter.
4)	Clogged or bent fuel pipe or hose	Clean, correct or replace fuel pipe or hose.
5)	Air is mixed in fuel system	Inspect or retighten each connection part.
6)	Clogged or bent air breather tube or pipe	Clean, correct or replace the air breather tube or pipe.
7)	Damaged diaphragm of pressure regulator	Replace.
<b>2. Leakage or blow out of fuel</b>		
1)	Loose joints of the fuel pipe	Retighten.
2)	Cracked fuel pipe, hose and fuel tank	Replace.
3)	Defective welding part on the fuel tank	Replace.
4)	Defective drain packing of the fuel tank	Replace.
5)	Clogged or bent air breather tube or air vent tube	Clean, correct or replace the air breather tube or air vent tube.
<b>3. Gasoline smell inside of compartment</b>		
1)	Loose joints at air breather tube, air vent tube and fuel filler pipe	Retighten.
2)	Problem in tightening of the fuel saucer packing air	Correct or replace the packing.
3)	Fuel pump trouble	Replace.
<b>4. Defective fuel meter indicator</b>		
1)	Defective operation of fuel level sensor	Replace.
2)	Defective operation of fuel meter	Replace.
<b>5. Noise</b>		
1)	Large operation noise or vibration of fuel pump	Replace.

#### NOTE:

- When the vehicle is left unattended for an extended period of time, water may accumulate in the fuel tank. Fill fuel fully to prevent the problem.
- In snow-covered areas, mountainous areas, skiing areas, etc. where ambient temperatures drop below 0°C (32°F) throughout the winter season, use a water removing agent in the fuel system to prevent freezing fuel system and accumulating water.
- When water is accumulated in fuel filter, fill the water removing agent in the fuel tank.
- Before using water removing agent, follow the cautions noted on the bottle.

# Fuel System Trouble in General

FUEL INJECTION (FUEL SYSTEMS)

---