


2. Air Cleaner Element

A: REMOVAL

1) Remove the clip (A) from the air cleaner upper cover.

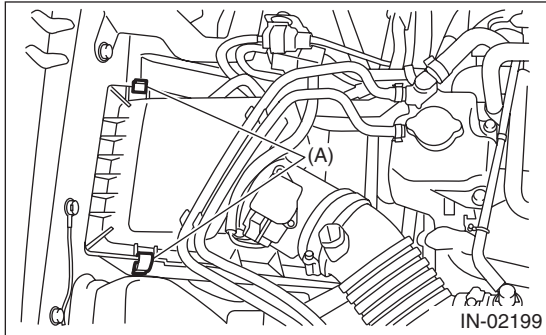


2) Remove the air cleaner element.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Before installing the air cleaner upper cover, align the protrusion with the hole of air cleaner lower case, and then secure the upper cover and lower case.

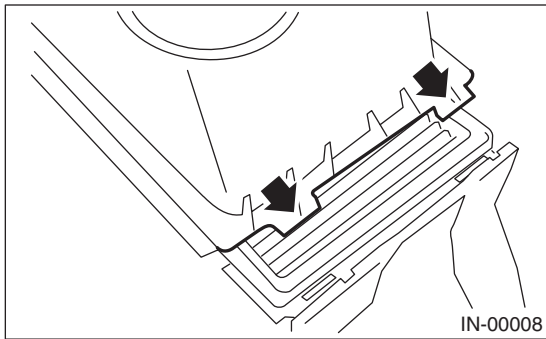

C: INSPECTION

Replace if excessively damaged or dirty.