


## 4. Air Intake Duct

### A: REMOVAL

Remove the bolts which install the air intake duct on the front side of body.

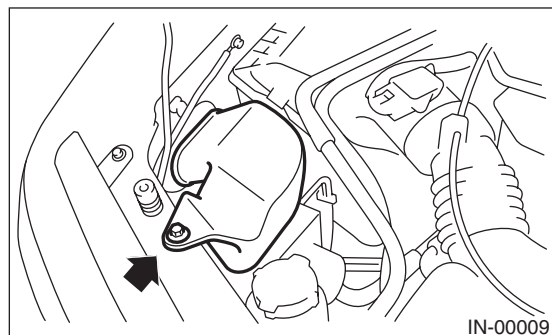


### B: INSTALLATION

Install in the reverse order of removal.

**Tightening torque:**

**7.5 N·m (0.76 kgf-m, 5.5 ft-lb)**

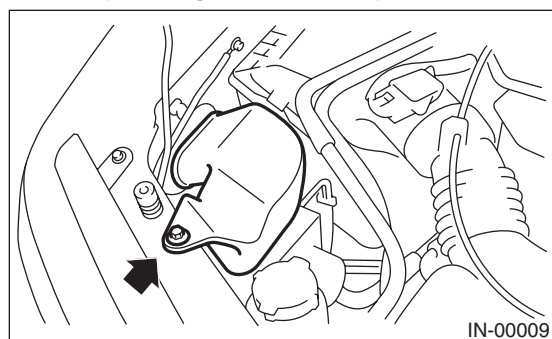

### C: INSPECTION

- 1) Check for cracks or loose connection.
- 2) Inspect that no foreign objects in the air intake duct.