


Intake Duct

INTAKE (INDUCTION)

5. Intake Duct

A: REMOVAL

1) Disconnect the ground cable from the battery.

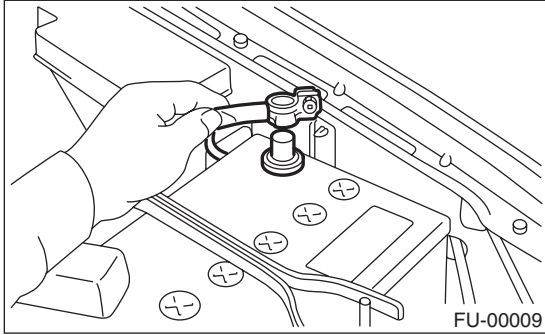


2) Remove the collector cover.

3) Remove the intake manifold.

<Ref. to FU(H4DOTC)-14, REMOVAL, Intake Manifold.>

4) Remove the sensor, engine harness and fuel pipe attached to the intake manifold. <Ref. to FU(H4DOTC)-19, DISASSEMBLY, Intake Manifold.>

5) Remove the intake duct from intake manifold.

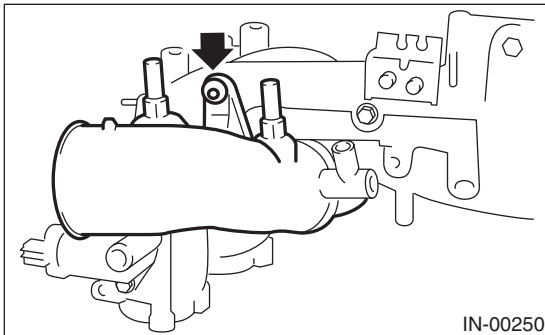

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

19 N·m (1.9 kgf·m, 13.7 ft·lb)

