


Air By-pass Valve

INTAKE (INDUCTION)

8. Air By-pass Valve

A: REMOVAL

- 1) Remove the collector cover.
- 2) Remove the air by-pass valve from intercooler.

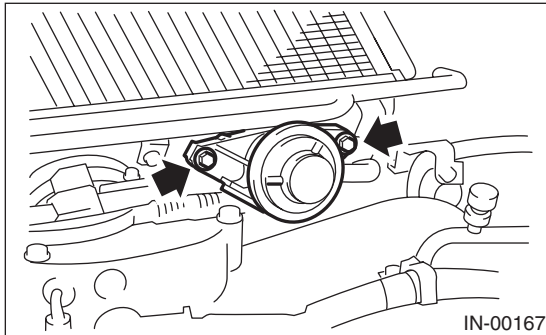

- 3) Disconnect the air by-pass hoses from air valve.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Be careful not to pinch the O-ring.

Tightening torque:

16 N·m (1.6 kgf·m, 11.6 ft·lb)

