



9. Resonator Chamber

A: REMOVAL

- 1) Set the vehicle on a lift.
- 2) Remove the collector cover.
- 3) Remove the air intake duct. <Ref. to IN(H4DOTC)-9, REMOVAL, Air Intake Duct.>
- 4) Remove the air cleaner lower case. <Ref. to IN(H4DOTC)-8, REMOVAL, Air Cleaner Case.>
- 5) Remove the resonator chamber mounting bolt on the right of engine compartment.

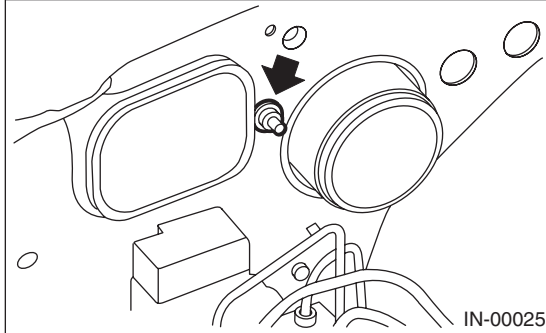

- 6) Remove the front tire RH, and lift-up the vehicle.
- 7) Remove the front mudguard RH.
- 8) Remove the resonator chamber from the inside front fender.


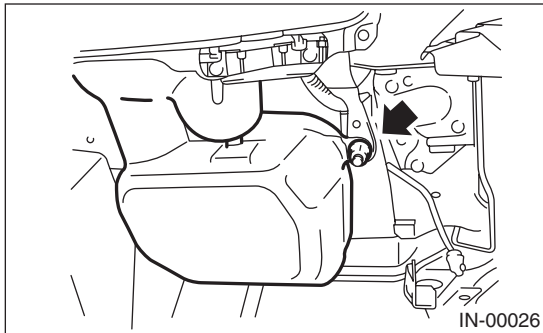


B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

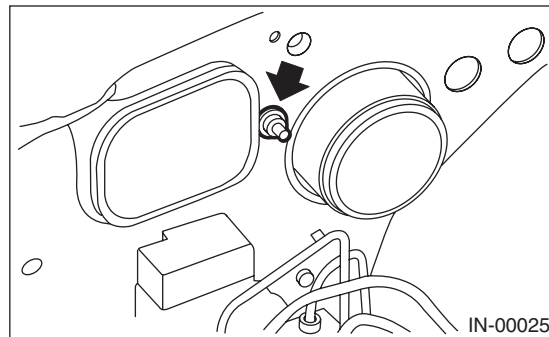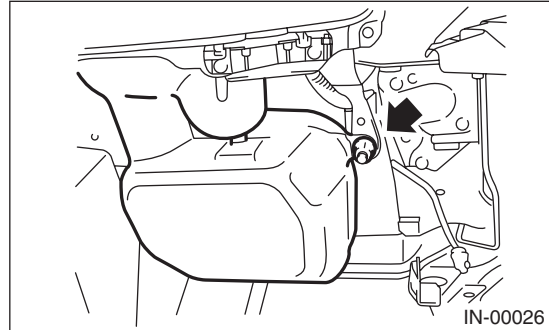

C: INSPECTION

Check for cracks or loose connection. Check that no foreign objects are mixed in the resonator chamber.

Resonator Chamber

INTAKE (INDUCTION)
