


## 10. Reservoir Tank

### A: REMOVAL

- 1) Disconnect the over flow hose which is connected to the radiator filler neck.
- 2) Remove the bolts which install reservoir tank onto radiator main fan shroud.
- 3) Remove the reservoir tank.

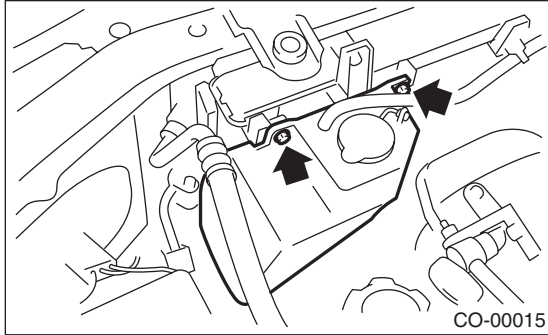


### B: INSTALLATION

Install in the reverse order of removal.

#### ***Tightening torque:***

***7.5 N·m (0.76 kgf-m, 5.5 ft-lb)***

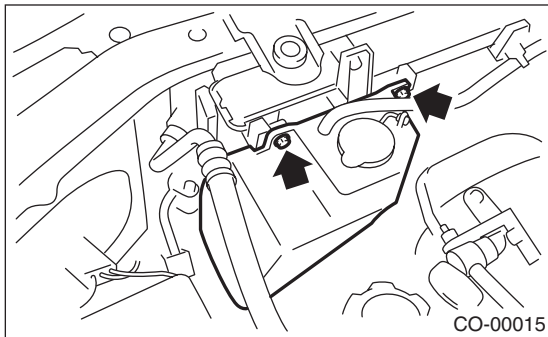

### C: INSPECTION

Make sure the engine coolant level is between "FULL" and "LOW".