

Fuel Level Sensor

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

7. Fuel Level Sensor

A: REMOVAL

Refer to the "FU" section for removal procedure.
<Ref. to FU(H4SO)-54, REMOVAL, Fuel Level Sensor.>

B: INSTALLATION

Refer to the "FU" section for installation procedure.
<Ref. to FU(H4SO)-54, INSTALLATION, Fuel Level Sensor.>