

# Shut Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

---

## 14. Shut Valve

### A: REMOVAL

#### WARNING:

Place "NO FIRE" signs near the working area.


#### CAUTION:

Be careful not to spill fuel.


1) Remove the fuel filler pipe.

<Ref. to FU(H4SO)-48, REMOVAL, Fuel Filler Pipe.>

2) Disconnect the evaporation hose from the shut valve.

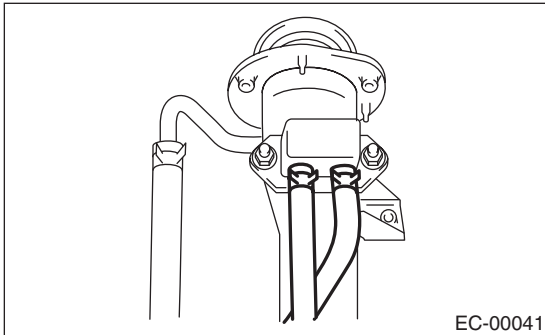

3) Remove the shut valve from the fuel filler pipe.

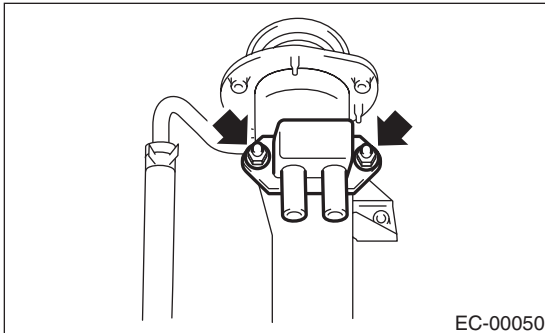


### B: INSTALLATION

Install in the reverse order of removal.

#### Tightening torque:

**4.5 N·m (0.46 kgf-m, 3.3 ft-lb)**

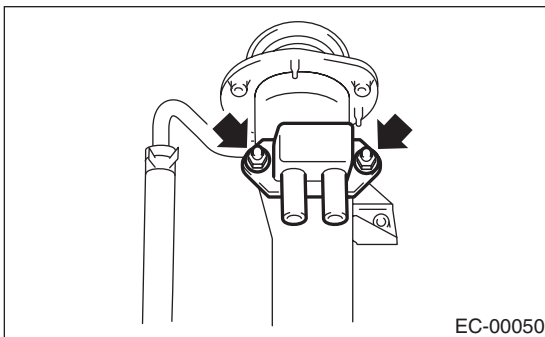

### C: INSPECTION

Make sure the hoses are not cracked or loose.