

# PCV Hose Assembly

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

## 16.PCV Hose Assembly


### A: REMOVAL

#### CAUTION:

**Do not remove PCV hose assembly except when the PCV hose, diagnostics connector and PCV valve are damaged.**

- 1) Remove the air intake chamber.  
<Ref. to IN (H4SO)-6, REMOVAL, Air Intake Chamber.>
- 2) Fit the depression in the ST with the protrusion on the clamp to unlock.
- 3) Remove the PCV hose assembly.

ST 18353AA000 CLAMP PLIERS

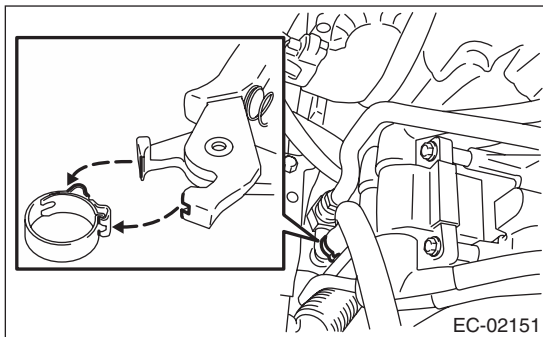


### B: INSTALLATION

#### NOTE:

Replace the clamp with a new part.

- 1) Install the PCV hose assembly, then lock by fitting the ST on the clamp protrusion.

ST 18353AA000 CLAMP PLIERS

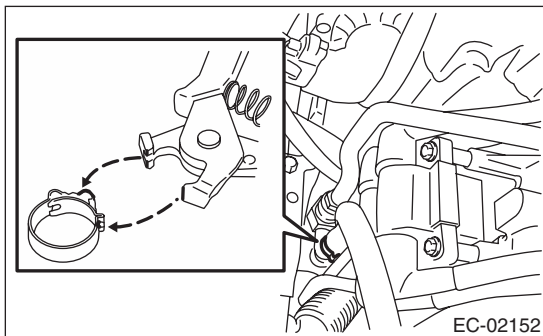

- 2) Install the air intake chamber.  
<Ref. to IN (H4SO)-6, INSTALLATION, Air Intake Chamber.>