

Drive Cycle

ENGINE (DIAGNOSTICS)

12. Drive Cycle

A: PROCEDURE

There are 6 drive patterns of drive cycles A — F for the trouble diagnosis. Performing the specified drive pattern allows to diagnose malfunctioning items listed below. After the malfunctioning items listed below are repaired, always check if they correctly resume their functions by performing the required drive pattern.

1. PREPARATION FOR DRIVE CYCLE

- 1) Check battery voltage is more than 12 V and fuel remains half [20 — 40 ℓ (5.3 — 10.6 US gal, 4.4 — 8.8 Imp gal)].
- 2) After clearing the memory, check for any remaining unresolved trouble data. <Ref. to EN(H4SO)(diag)-44, Clear Memory Mode.>
- 3) Disconnect the test mode connector.

NOTE:

- Except for the water temperature specified items at starting, be sure to carry out the diagnosis after the engine is warmed up.
- For the DTC which has * mark on it, carry out the diagnosis twice. After finishing first diagnosis, stop the engine, and do the second diagnosis at the same condition.

2. DRIVE CYCLE A (AFTER RUNNING 20 MINUTES AT 80 KM/H (50 MPH), IDLE THE ENGINE FOR 1 MINUTE.)

DTC	Item	Condition
*P0125	Insufficient Coolant Temperature for Closed Loop Fuel Control	Coolant temperature at start is less than 20°C (68°F).
*P0128	Coolant Thermostat (Engine Coolant Temperature Below Thermostat Regulating Temperature)	—
*P0133	O2 Sensor Circuit Slow Response (Bank 1 Sensor 1)	—
*P0171	System too Lean (Bank 1)	Diagnosis completes in drive cycle B or C as well.
*P0172	System too Rich (Bank 1)	Diagnosis completes in drive cycle B or C as well.
*P0196	Engine Oil Temperature Sensor Circuit Range/Performance	—
*P0301	Cylinder 1 Misfire Detected	Diagnosis completes in drive cycle B or C as well.
*P0302	Cylinder 2 Misfire Detected	Diagnosis completes in drive cycle B or C as well.
*P0303	Cylinder 3 Misfire Detected	Diagnosis completes in drive cycle B or C as well.
*P0304	Cylinder 4 Misfire Detected	Diagnosis completes in drive cycle B or C as well.
*P0420	Catalyst System Efficiency Below Threshold (Bank 1)	—
*P0442	Evaporative Emission Control System Leak Detected (Small Leak)	Coolant temperature at start is less than 25°C (77°F).
*P0451	Evaporative Emission Control System Pressure Sensor	—
*P0456	Evaporative Emission Control System Leak Detected (Very Small Leak)	Coolant temperature at start is less than 25°C (77°F).
*P0457	Evaporative Emission Control System Leak Detected (Fuel Cap Loose/Off)	Coolant temperature at start is less than 25°C (77°F).
*P0459	Evaporative Emission Control System Purge Control Valve Circuit High	—
P1443	Vent Control Solenoid Valve Function Problem	—
*P2096	Post Catalyst Fuel Trim System Too Lean Bank 1	Diagnosis completes in drive cycle B or C as well.
*P2097	Post Catalyst Fuel Trim System Too Rich Bank 1	Diagnosis completes in drive cycle B or C as well.
P2103	Throttle Actuator Control Motor Circuit High	Diagnosis completes in drive cycle B or C as well.


3. DRIVE CYCLE B (TEN MINUTES IDLING)

NOTE:

Drive the vehicle in more than 10 km/h (6 MPH) before diagnosis.

DTC	Item	Condition
*P0126	Insufficient Coolant Temperature for Stable Operation	—
*P0171	System Too Lean (Bank 1)	Diagnosis completes in drive cycle A or C as well.
*P0172	System Too Rich (Bank 1)	Diagnosis completes in drive cycle A or C as well.
*P0301	Cylinder 1 Misfire Detected	Diagnosis completes in drive cycle A or C as well.
*P0302	Cylinder 2 Misfire Detected	Diagnosis completes in drive cycle A or C as well.
*P0303	Cylinder 3 Misfire Detected	Diagnosis completes in drive cycle A or C as well.
*P0304	Cylinder 4 Misfire Detected	Diagnosis completes in drive cycle A or C as well.
*P0464	Fuel Level Sensor Circuit Intermittent	—
*P0483	Fan Rationality Check	—
*P0506	Idle Air Control System RPM Lower Than Expected	—
*P0507	Idle Air Control System RPM Higher Than Expected	—
*P2096	Post Catalyst Fuel Trim System Too Lean Bank 1	Diagnosis completes in drive cycle A or C as well.
*P2097	Post Catalyst Fuel Trim System Too Rich Bank 1	Diagnosis completes in drive cycle A or C as well.
P2103	Throttle Actuator Control Motor Circuit High	Diagnosis completes in drive cycle A or C as well.

4. DRIVE CYCLE C (DRIVE ACCORDING TO THE FOLLOWING DRIVE PATTERN)

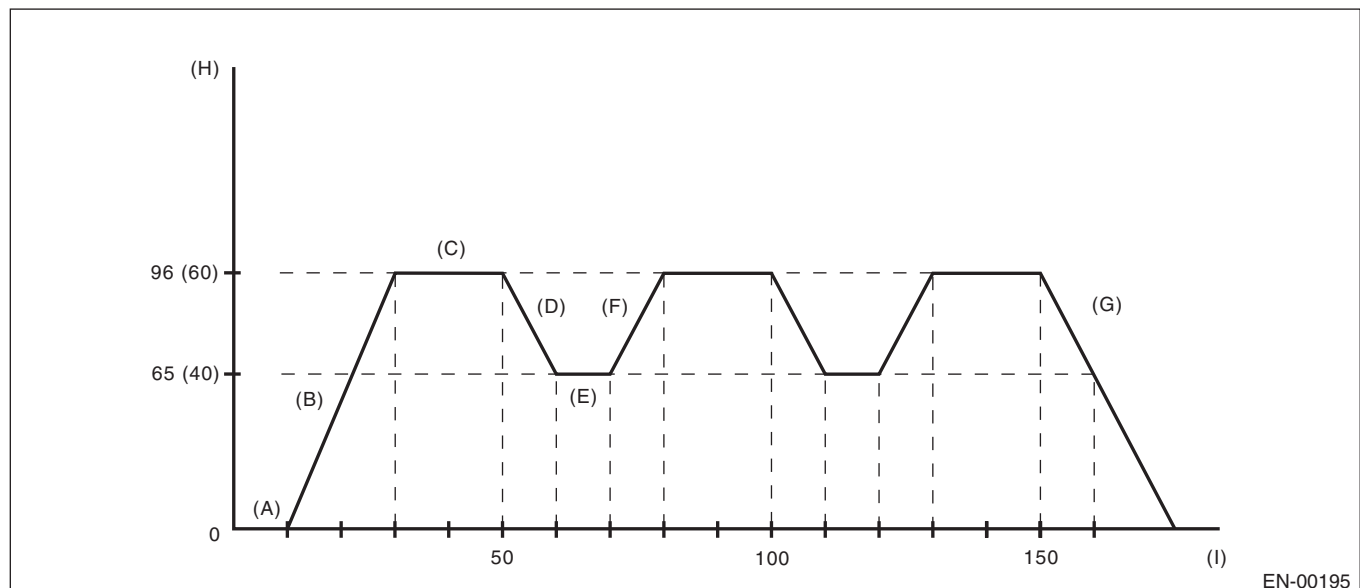

EN-00195

- | | | |
|---|--|--|
| (A) Idle the engine for 1 minute. | (D) Decelerate the vehicle to 65 km/h (40 MPH) with throttle fully closed. | (G) Stop vehicle with the throttle fully closed. |
| (B) Accelerate the vehicle to 96 km/h (60 MPH) within 20 seconds. | (E) Drive the vehicle at 65 km/h (40 MPH) for 10 seconds. | (H) Vehicle speed km/h (MPH) |
| (C) Drive the vehicle at 96 km/h (60 MPH) for 20 seconds. | (F) Accelerate the vehicle to 96 km/h (60 MPH) within 10 seconds. | (I) Sec. |

Drive Cycle

ENGINE (DIAGNOSTICS)

DTC	Item	Condition
P0026	Intake Valve Control Solenoid Circuit Range/Performance (Bank 1)	—
P0028	Intake Valve Control Solenoid Circuit Range/Performance (Bank 2)	—
*P0030	HO2S Heater Control Circuit (Bank 1 Sensor 1)	—
*P0068	Manifold Absolute Pressure/Barometric Pressure Circuit Range/Performance	—
P0076	Intake Valve Control Solenoid Circuit Low (Bank 1)	—
P0082	Intake Valve Control Solenoid Circuit Low (Bank 2)	—
*P0101	Mass or Volume Air Flow Circuit Range/Performance	—
P0134	O2 Sensor Circuit No Activity Detected (Bank 1 Sensor 1)	—
*P0139	O2 Sensor Circuit Slow Response (Bank 1 Sensor 2)	—
*P0171	System Too Lean (Bank 1)	Diagnosis completes in drive cycle A or B as well.
*P0172	System Too Rich (Bank 1)	Diagnosis completes in drive cycle A or B as well.
*P0301	Cylinder 1 Misfire Detected	Diagnosis completes in drive cycle A or B as well.
*P0302	Cylinder 2 Misfire Detected	Diagnosis completes in drive cycle A or B as well.
*P0303	Cylinder 3 Misfire Detected	Diagnosis completes in drive cycle A or B as well.
*P0304	Cylinder 4 Misfire Detected	Diagnosis completes in drive cycle A or B as well.
*P0400	Exhaust Gas Recirculation Flow	—
P1492	EGR Solenoid Valve Signal #1 Circuit Malfunction (Low Input)	—
P1493	EGR Solenoid Valve Signal #1 Circuit Malfunction (High Input)	—
P1494	EGR Solenoid Valve Signal #2 Circuit Malfunction (Low Input)	—
P1495	EGR Solenoid Valve Signal #2 Circuit Malfunction (High Input)	—
P1496	EGR Solenoid Valve Signal #3 Circuit Malfunction (Low Input)	—
P1497	EGR Solenoid Valve Signal #3 Circuit Malfunction (High Input)	—
P1498	EGR Solenoid Valve Signal #4 Circuit Malfunction (Low Input)	—
P1499	EGR Solenoid Valve Signal #4 Circuit Malfunction (High Input)	—
*P2096	Post Catalyst Fuel Trim System Too Lean Bank 1	Diagnosis completes in drive cycle A or B as well.
*P2097	Post Catalyst Fuel Trim System Too Rich Bank 1	Diagnosis completes in drive cycle A or B as well.
P2103	Throttle Actuator Control Motor Circuit High	Diagnosis completes in drive cycle A or B as well.

5. DRIVE CYCLE D

DRIFT DIAGNOSIS

- 1) Make sure that the engine coolant temperature at engine starting is less than 30°C (86°F).
- 2) Make sure that fuel remains more than 9.0 ℓ (2.4 US gal, 2.0 Imp gal) and the battery voltage is more than 10.9 V.
- 3) Make sure that the engine coolant temperature rises for more than 10°C (18°F) from the level of engine starting and is also above 75°C (167°F).
- 4) Idle the engine for more than 120 seconds in the condition of step 3.

STUCK DIAGNOSIS

- 1) Make sure that the battery voltage is more than 10.9 V.
- 2) Perform the Clear Memory Mode. <Ref. to EN(H4SO)(diag)-44, Clear Memory Mode.>
- 3) Drive the vehicle for the distance equal to the fuel of 50 ℓ (13.2 US gal, 11 Imp gal).

NOTE:

- It is acceptable to drive the vehicle intermittently.
- Do not disconnect the terminal of battery during diagnosis. (Data will be cleared when disconnecting the battery terminals.)

DTC	Item	Condition
P0181	Fuel Temperature Sensor "A" Circuit Range/Performance	—

6. DRIVE CYCLE E

- 1) Make sure that the battery voltage is more than 10.9 V.
- 2) Perform the Clear Memory Mode. <Ref. to EN(H4SO)(diag)-44, Clear Memory Mode.>
- 3) Drive the vehicle for the distance equal to the fuel of 30 ℓ (7.9 US gal, 6.6 Imp gal).

NOTE:

- It is acceptable to drive the vehicle intermittently.
- Do not disconnect the terminal of battery during diagnosis. (Data will be cleared when disconnecting the battery terminals.)

DTC	Item	Condition
P0461	Fuel Level Sensor "A" Circuit Range/Performance	—

7. DRIVE CYCLE F

- 1) Make sure that the engine coolant temperature at engine starting is less than 30°C (86°F).
- 2) Warm-up the engine until engine coolant temperature rises above 95°C (203°F) after starting the engine.
- 3) Idle the engine for more than 10 minutes in the condition of step 2.

NOTE:

Do not disconnect the terminal of battery during diagnosis. (Data will be cleared when disconnecting the battery terminals.)

DTC	Item	Condition
P0111	Intake Air Temperature Sensor 1 Circuit Range/Performance	—

8. DRIVE CYCLE H

- 1) Perform the Clear Memory Mode. <Ref. to EN(H4SO)(diag)-44, Clear Memory Mode.>
- 2) Read the engine coolant temperature, intake air temperature and fuel temperature with ignition switch ON. <Ref. to EN(H4SO)(diag)-28, READ CURRENT DATA FOR ENGINE (NORMAL MODE), OPERATION, Subaru Select Monitor.>
- 3) Start the engine if the value in step 2) meets the following two conditions.

Condition:

$$| \text{engine coolant temperature} - \text{intake air temperature} | \leq 5^{\circ}\text{C} (41^{\circ}\text{F})$$

$$| \text{engine coolant temperature} - \text{fuel temperature} | \leq 2^{\circ}\text{C} (36^{\circ}\text{F})$$

NOTE:

- If the value does not meet the conditions, turn the ignition switch to OFF and wait until it meets.
 - Start the engine in P range (AT model) or in N position (MT model).
- 4) Idle the engine for one minute in the condition of step 3.

DTC	Item	Condition
*P1602	Control Module Programming Error	—