


Rear Exhaust Pipe

EXHAUST

4. Rear Exhaust Pipe

A: REMOVAL


- 1) Set the vehicle on a lift.
- 2) Lift-up the vehicle.
- 3) Separate the rear exhaust pipe from center exhaust pipe.

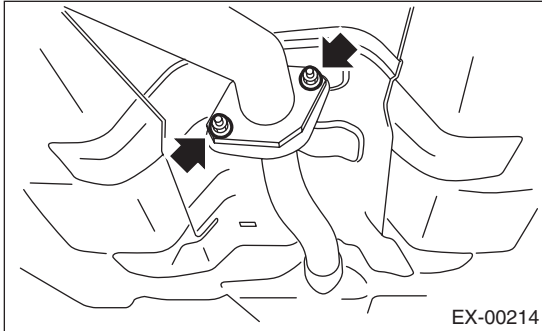


- 4) Separate the rear exhaust pipe from muffler.

CAUTION:

Be careful not to pull down the rear exhaust pipe.

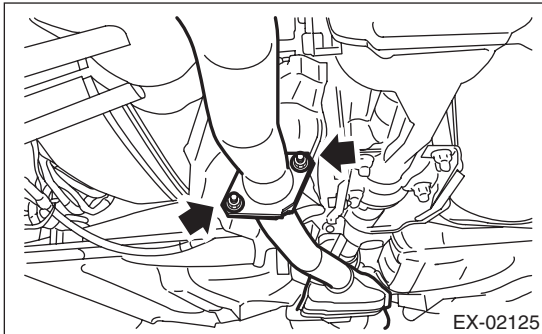


- 5) Apply a coat of spray type lubricant to the mating area of cushion rubber.
- 6) Remove the rear exhaust pipe bracket from cushion rubber.

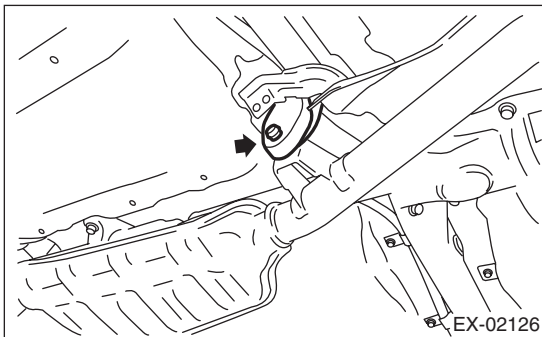

B: INSTALLATION

- 1) Install the rear exhaust pipe bracket to cushion rubber.

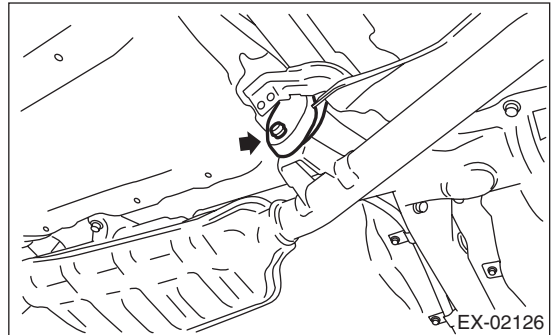


- 2) Install the rear exhaust pipe to muffler.

NOTE:

- Use a new gasket and self-locking nut.
- When the lubricant was applied to the cushion rubber during the removal/installation, degrease it after reassembling.

Tightening torque:


48 N·m (4.9 kgf-m, 35.4 ft-lb)

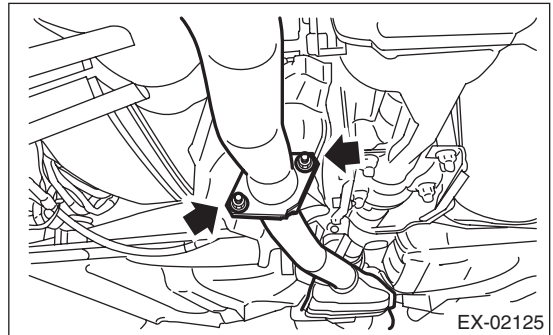

- 3) Install the rear exhaust pipe to center exhaust pipe.

Tightening torque:

18 N·m (1.8 kgf-m, 13.0 ft-lb)

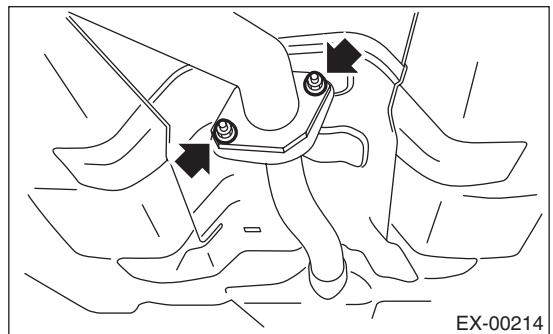

C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Check for hole or rust.
- 3) Check the cushion rubber for wear or crack.