

# Fuel Level Sensor

FUEL INJECTION (FUEL SYSTEMS)

---

## 25. Fuel Level Sensor

### A: REMOVAL

**WARNING:**

Place "NO FIRE" signs near the working area.

**CAUTION:**

Be careful not to spill fuel.


**NOTE:**

The fuel level sensor is built in fuel pump assembly.

1) Remove the fuel pump assembly.


<Ref. to FU(H4SO)-52, REMOVAL, Fuel Pump.>

2) Disconnect the connector from fuel pump bracket.

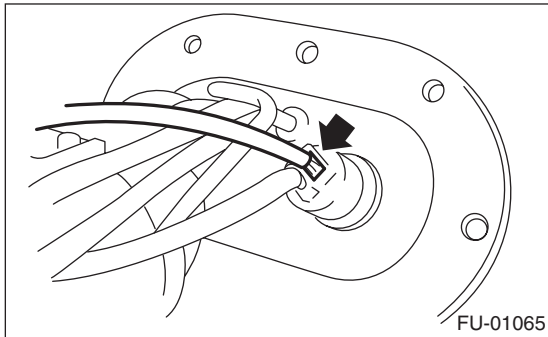

3) Remove the fuel temperature sensor (A).

4) Remove the bolt (B) which installs the fuel level sensor on the mounting bracket.

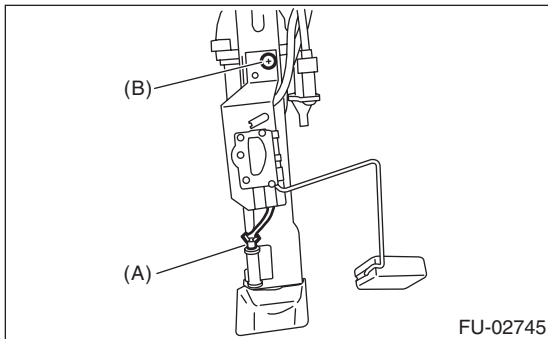

### B: INSTALLATION

Install in the reverse order of removal.