


Resonator Chamber

INTAKE (INDUCTION)


6. Resonator Chamber

A: REMOVAL

- 1) Set the vehicle on a lift.
- 2) Remove the air intake duct.
- 3) Remove the air cleaner lower case.
<Ref. to IN (H4SO)-5, REMOVAL, Air Cleaner Case.>
- 4) Remove the resonator chamber attaching bolts on the right side of the engine room.

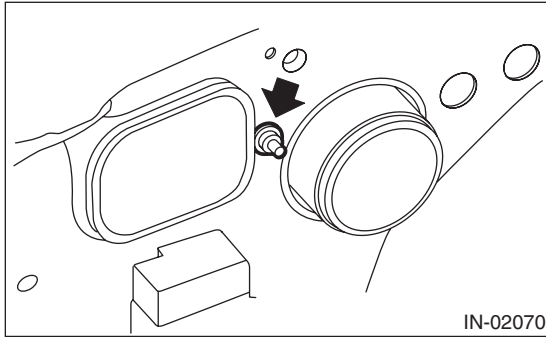

- 5) Remove the front wheel RH, and lift-up the vehicle.
- 6) Remove the front mudguard RH.
- 7) Remove the resonator chamber from the inside front fender.

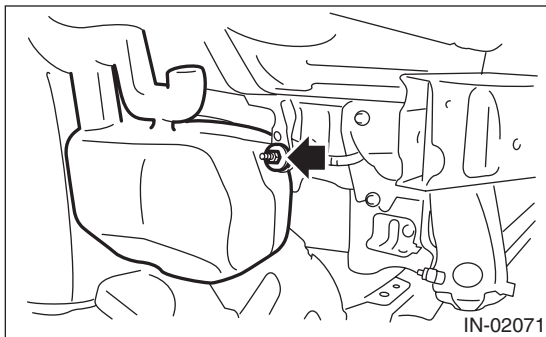

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

C: INSPECTION

- 1) Check for cracks or loose connection.
- 2) Check that no foreign objects are mixed in the resonator.