

## 10.Engine Mounting

### A: REMOVAL

- 1) Remove the engine unit. <Ref. to ME(H4SO)-32, REMOVAL, Engine Assembly.>
- 2) Remove the engine mounting from engine assembly.

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

#### *Engine mounting*

*35 N·m (3.6 kgf·m, 25.8 ft-lb)*

### C: INSPECTION

Make sure that no crack or other damages do not exist.