## 24.Piston

## **A: SPECIFICATION**

Refer to "Cylinder Block" for removal and installation procedures of pistons. <Ref. to ME(H4SO)-65, REMOVAL, Cylinder Block.> <Ref. to ME(H4SO)-69, INSTALLATION, Cylinder Block.>