


5. Spark Plug

A: REPLACEMENT

- 1) Remove the intake duct and intake chamber.
- 2) Remove the washer tank and set to the side.
- 3) Disconnect the spark plug cord.
- 4) Remove the spark plug with a plug-wrench.

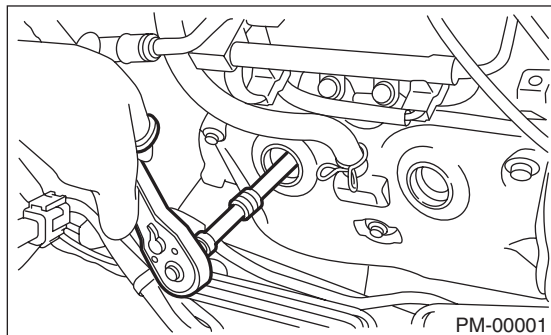

- 5) Install a new spark plug.

Spark plug:

Non-turbo model

NGK: FR5AP-11

Turbo model:

NGK: ILFR6B

Spark plug gap:

Non-turbo model

1.0 — 1.1 mm (0.039 — 0.043 in)

Turbo model

0.7 — 0.8 mm (0.028 — 0.031 in)

- 6) Tighten the spark plug lightly with hand, and then secure with a plug-wrench to the specified torque.

Tightening torque:

21 N·m (2.14 kgf·m, 15.49 ft·lb)

NOTE:

- Be sure to place the gasket between the cylinder head and spark plug.
- If the torque wrench is not available, tighten the spark plug until gasket contacts cylinder head, then tighten further 1/4 to 1/2 turns.