

Air Cleaner Element


PERIODIC MAINTENANCE SERVICES

10. Air Cleaner Element


A: REMOVAL

1. NON-TURBO MODEL

1) Remove the clips (B) on air cleaner case.

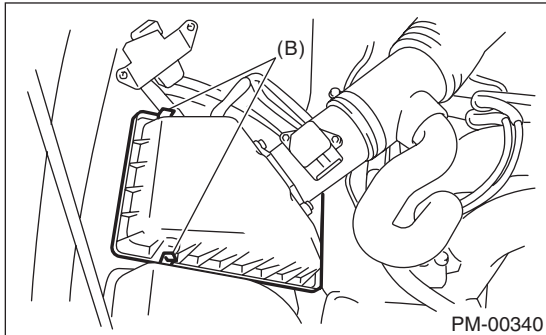


2) Remove the air cleaner element.

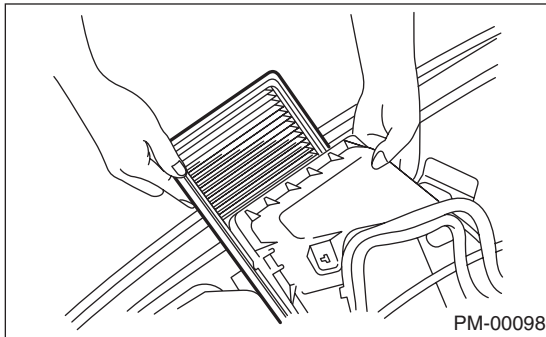


2. TURBO MODEL

1) Remove the clips (B) on air cleaner case.

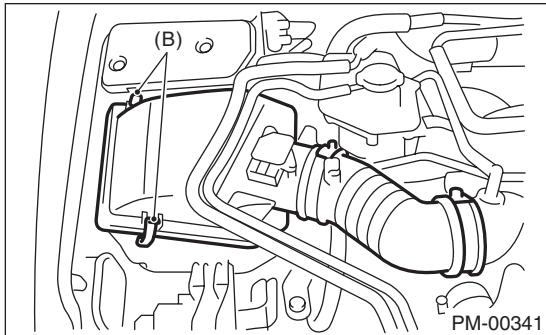

2) Remove the air cleaner element.

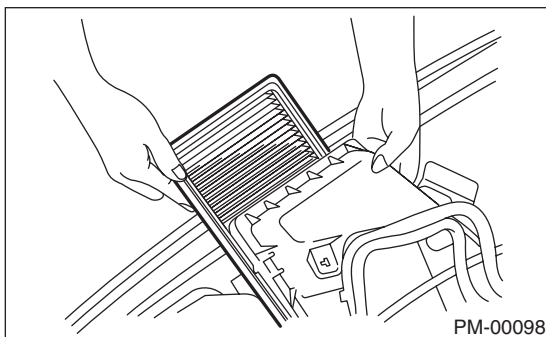


B: INSTALLATION

1. NON-TURBO MODEL


Install in the reverse order of removal.

NOTE:

•The air cleaner element differs depending on the destination market. For the specification of U5 model, refer to the NOTE (A) on the upper side of air cleaner upper cover.

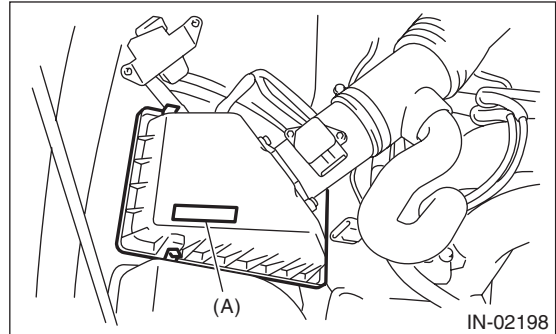

•Fasten with a clip after inserting the lower tab of case.

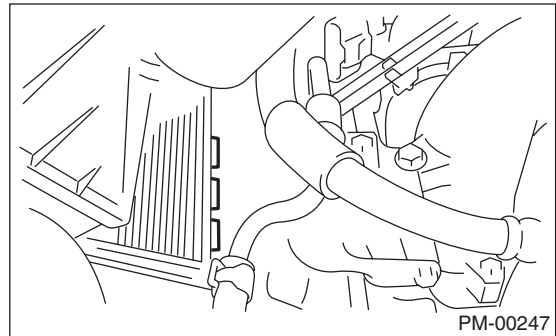


2. TURBO MODEL

Install in the reverse order of removal.

CAUTION:

Position the protrusion on the air cleaner upper cover with the hole in the air cleaner lower case to mount the upper cover on the case.

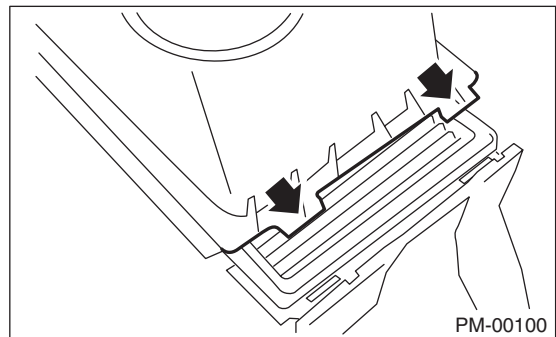

C: INSPECTION

- Replace with a new part if the air cleaner element is extremely damaged or dirty.
- Replace the air cleaner upper cover when the HC adsorption filter is damaged. (U5 model)