

14. Transmission Gear Oil


A: REPLACEMENT

1. MANUAL TRANSMISSION

1) Drain the gear oil by removing drain plug.

CAUTION:

- Before starting work, cool off the transmission gear oil well.
- If transmission gear oil adheres to the exhaust pipe, wipe it off completely.

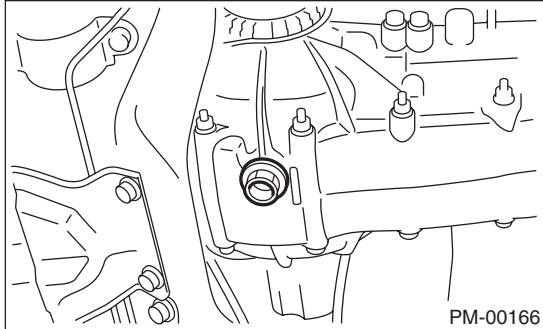

2) Replace the gasket with new part, and then tighten the drain plug to specified torque.

Tightening torque:

Copper gasket

70 N·m (7.1 kgf·m, 51.6 ft·lb)

Aluminum gasket

44 N·m (4.5 kgf·m, 32.5 ft·lb)


3) Fill the transmission gear oil through the oil level gauge hole up to the upper point of level gauge.

CAUTION:

Each oil manufacturer has its base oil and additives. Thus, do not mix two or more brands.

Gear oil capacity:

3.5 ℓ (3.7 US qt, 3.1 Imp qt)

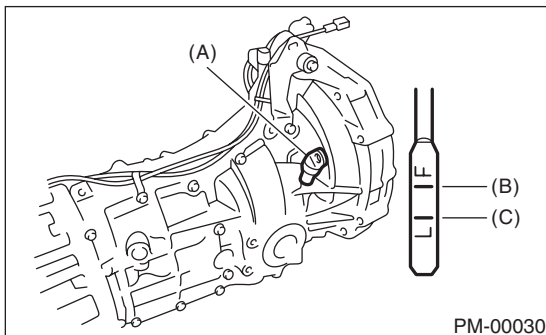

- (A) Oil level gauge
- (B) Upper level
- (C) Lower level