

7. Read Diagnostic Trouble Code (DTC)

A: OPERATION

1. SUBARU SELECT MONITOR

Refer to Subaru Select Monitor for information on how to display a DTC. <Ref. to 4AT(D)(diag)-14, OPERATION, Subaru Select Monitor.>

NOTE:

DTC can not be read through AT OIL TEMP warning light.