

9. General Diagnostic Table

A: INSPECTION

Symptoms	Problem parts
Shift lock does not function.	<ul style="list-style-type: none"> • Stop light switch • Shift lock solenoid • Body integrated unit
Shift lock cannot be released.	<ul style="list-style-type: none"> • Stop light switch • Shift lock solenoid • Body integrated unit • Inhibitor switch
Key interlock does not function.	<ul style="list-style-type: none"> • Key warning switch • "P" range switch • Key lock solenoid • Body integrated unit
Key interlock cannot be released.	<ul style="list-style-type: none"> • Key warning switch • "P" range switch • Key lock solenoid • Body integrated unit
Starter does not run.	<ul style="list-style-type: none"> • Inhibitor switch • Select cable • Starter circuit
Back-up light does not illuminate.	<ul style="list-style-type: none"> • Inhibitor switch • Select cable • Back-up light circuit
Gear can be shifted from "N" to "R" during driving.	<ul style="list-style-type: none"> • Shift lock solenoid • TCM

General Diagnostic Table

CONTROL SYSTEMS
