



## 6. Inner Remote Assembly

### C: ADJUSTMENT

- 1) Lock the door.
- 2) Loosen bolt ①.
- 3) Lower bell crank ② and then tighten bolt ①.