


### 3. Fuel Flap

#### A: REMOVAL

##### 1. FUEL FLAP

Remove bolts which hold hinge to car body, and detach fuel flap and hinge as a unit.

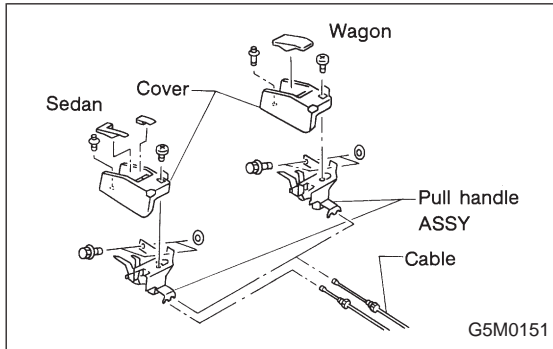

##### 2. FUEL FLAP OPENER

- 1) Remove driver's seat, rear seats, center pillar lower cover, floor mat, rear arch cover/rear quarter trim (wagon), and side sill cover (on the driver's side).
- 2) Remove all clips which hold cable.
- 3) Disconnect cable from pull handle.
- 4) Detach pull handle by removing bolts.
- 5) Detach fuel lock holder by turning it.

#### B: INSTALLATION

Installation is in the reverse order of removal.

##### CAUTION:

- When installing cover to pull handle assembly, observe the following:
- Be careful not to catch harness.
- Engage pull handle assembly pawls firmly.
- Make sure the clearance between fuel flap and car body is equal at all points.
- After installing opener cable, ensure it moves smoothly.