



7. Door Latch

A: REMOVAL AND INSTALLATION

- 1) Remove trim panel.
- 2) Remove inner remote assembly.
- 3) Remove sealing cover around latch service hole.
- 4) Completely close door glass.

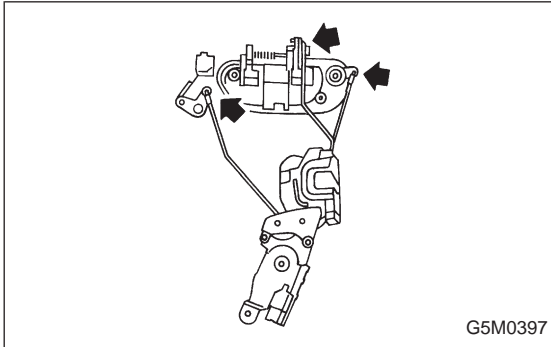

- 5) Remove latch and actuator assembly.
 - (1) Turn rod holder to disconnect joint between key lock and rod.
 - (2) Turn rod holder to disconnect joint between outer handle and rod.
 - (3) Turn rod holder to disconnect joint between crank and rod.

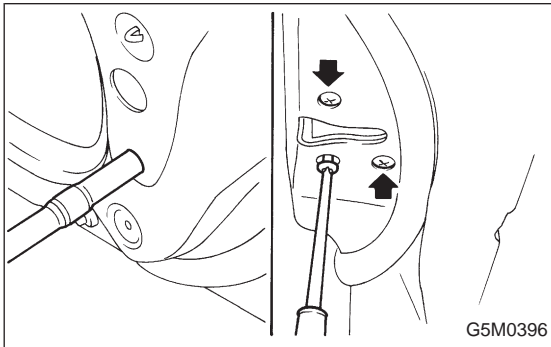

- 6) Loosen screws securing both latch and actuator, then remove latch and actuator assembly through service hole in bottom.

Tightening torque (screw):

4.4 — 8.3 N·m (0.45 — 0.85 kg·m, 3.3 — 6.1 ft-lb)

Installation is in the reverse order of removal.

B: INSPECTION

- 1) Check operation of each part.
- 2) Check each sliding part for proper lubrication.

CAUTION:

After installation, be sure lock mechanism operates normally.