



8. Outer Handle

A: REMOVAL AND INSTALLATION

- 1) Remove trim panel.
- 2) Remove sealing cover.
- 3) Detach door latch rod from outer handle and key lock.
- 4) Loosen nut securing outer handle and then remove outer handle from outside.

CAUTION:

Be careful not to damage door.

Installation is in the reverse order of removal.

Tightening torque:

5.4 — 9.3 N·m (0.55 — 0.95 kg-m, 4.0 — 6.9 ft-lb)

9. Key Lock

A: REMOVAL AND INSTALLATION

- 1) Remove trim panel.
- 2) Remove sealing cover.
- 3) Completely close door glass.
- 4) Remove outer handle.
- 5) Loosen spring securing key lock.
- 6) Remove key lock from outer handle.

Installation is in the reverse order of removal.

NOTE:

Install so that key slot in key lock comes to center of hole in outer handle.