

5. Rear Seat Belt

A: REMOVAL

1. SEDAN MODEL

- 1) Remove rear cushion from body.
- 2) Remove rear backrest from body.
- 3) Remove screw from lower side of rear quarter trim, and lift up lower side of rear quarter trim.
- 4) Remove trim panel rear bracket upper.
- 5) Remove rear quarter trim.
- 6) Remove outer anchor bolts.
- 7) Remove rear bolt from ELR.
- 8) Remove belt from outlet in rear quarter along slit.

- 9) Remove inner bolts which secure outer seat.
- 10) Remove washer from bolt, then remove bolt, belt assembly, and anchor plate bracket.
- 11) Remove inner bolts (2 places) from center seat.
- 12) Remove washer from bolt, and remove bolt, belt assembly and anchor plate bracket.

2. WAGON MODEL

- 1) Raise rear cushion.
- 2) Remove rear backrest from body.
Remove shoulder anchor cover and anchor bolt.
- 3) Remove lower portion of rear quarter trim.
- 4) Remove lap anchor cover and bolt.

- 5) Remove 7/16-20 UNF nuts which secure ELR and remove ELR.

CAUTION:

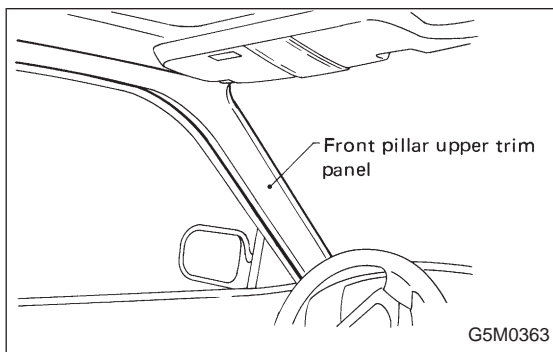
Remove outer seat belt and center seat belt in similar manner used to remove those from Sedan.

B: INSTALLATION

Installation is in the reverse order of removal. Ensure that seat belt is properly reeled on and off after installation of ELR.

CAUTION:

- Be extremely careful not to confuse center seat anchor plate with outer seat anchor plate during installation.
- Ensure that seat belts are free from twisting after installation.
- Ensure that tongues, buckles and belts are properly placed on seat.

**6. Front Pillar Upper Trim Panel****A: REMOVAL**

- 1) Remove center pillar lower trim panel.
- 2) Remove seat belt anchor bolts.
- 3) Pry pawls off body flange of front pillar upper trim panel using screwdriver.
- 4) Remove clips which hold front pillar upper trim panel, and lift trim panel out by moving it toward the compartment.

B: INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

Be sure to securely hook pawls of front pillar upper trim panel on body flange.