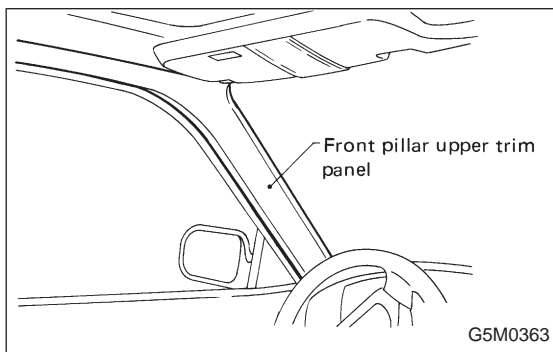


B: INSTALLATION

Installation is in the reverse order of removal. Ensure that seat belt is properly reeled on and off after installation of ELR.

CAUTION:

- Be extremely careful not to confuse center seat anchor plate with outer seat anchor plate during installation.
- Ensure that seat belts are free from twisting after installation.
- Ensure that tongues, buckles and belts are properly placed on seat.

**6. Front Pillar Upper Trim Panel****A: REMOVAL**

- 1) Remove center pillar lower trim panel.
- 2) Remove seat belt anchor bolts.
- 3) Pry pawls off body flange of front pillar upper trim panel using screwdriver.
- 4) Remove clips which hold front pillar upper trim panel, and lift trim panel out by moving it toward the compartment.

B: INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

Be sure to securely hook pawls of front pillar upper trim panel on body flange.