


## 2. Airbag Module


### A: REMOVAL

#### 1. DRIVER SIDE

- 1) Set front wheels in straight ahead position.
- 2) Turn ignition switch off.
- 3) Disconnect ground cable from battery and wait for at least 20 seconds before starting work.

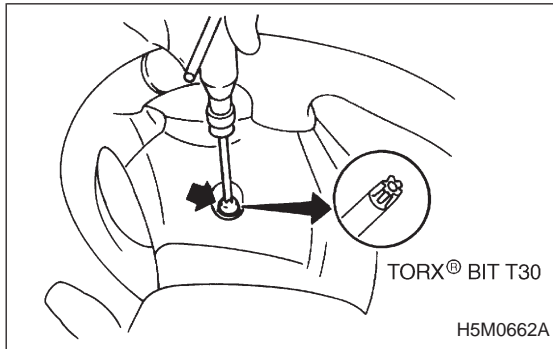

- 4) Using TORX® BIT T30, remove two TORX® bolts.

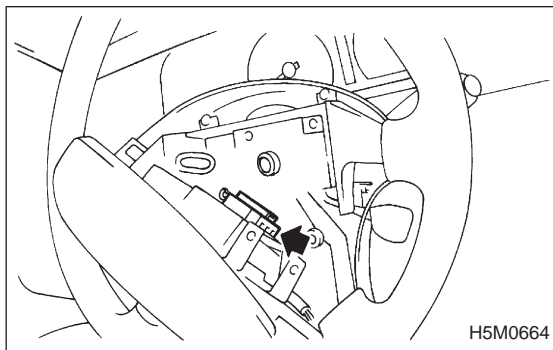


- 5) Disconnect airbag and horn connectors on back of airbag module. <Ref. to 5-5 [M2-6].>

- 6) Refer to "Precaution" for handling of a removed airbag module.

#### 2. PASSENGER SIDE

- 1) Remove instrument panel. <Ref. to 5-4 [W1A0].>

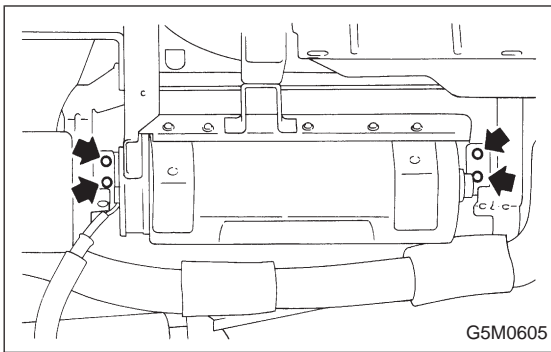

- 2) Remove four bolts and then carefully remove airbag module.
- 3) Refer to "5-5 [W102]" for handling of a removed airbag module.

**B: INSTALLATION**

Installation is in reverse order of removal procedures. Observe the following: Make sure that ignition switch is off.


**CAUTION:**

**Do not allow harness and connectors to interfere or get caught with other parts.**

**3. Main Harness**

**A: REMOVAL**


- 1) Turn ignition switch off.
- 2) Disconnect ground cable from battery and wait for at least 20 seconds before starting work.

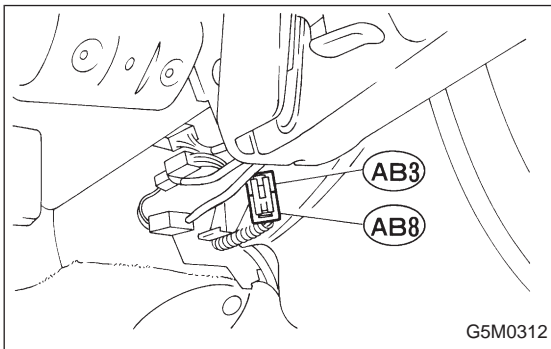

- 3) Remove lower cover. <Ref. to 5-4 [W1A0].> Disconnect airbag connector (AB3) and (AB8) below steering column.

**CAUTION:**

**Do not reconnect airbag connector at steering column until main harness are securely re-installed.**

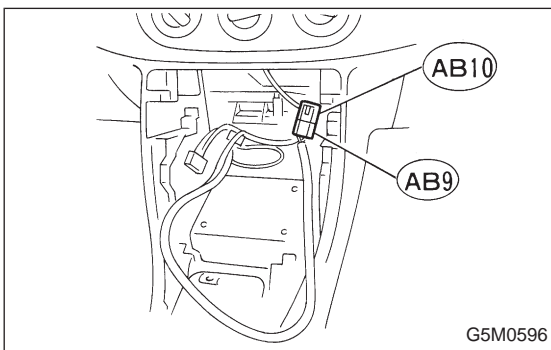

- 4) Disconnect airbag connector (AB9) and (AB10) <Ref. to 5-5 [T5F1].>