


4. Test Harnesses and Airbag Resistor

CAUTION:



Be sure to use specified test harness A, B or C when measuring voltage, resistance, etc. of AIRBAG system component parts.

A: TEST HARNESS A (PN98299PA000)

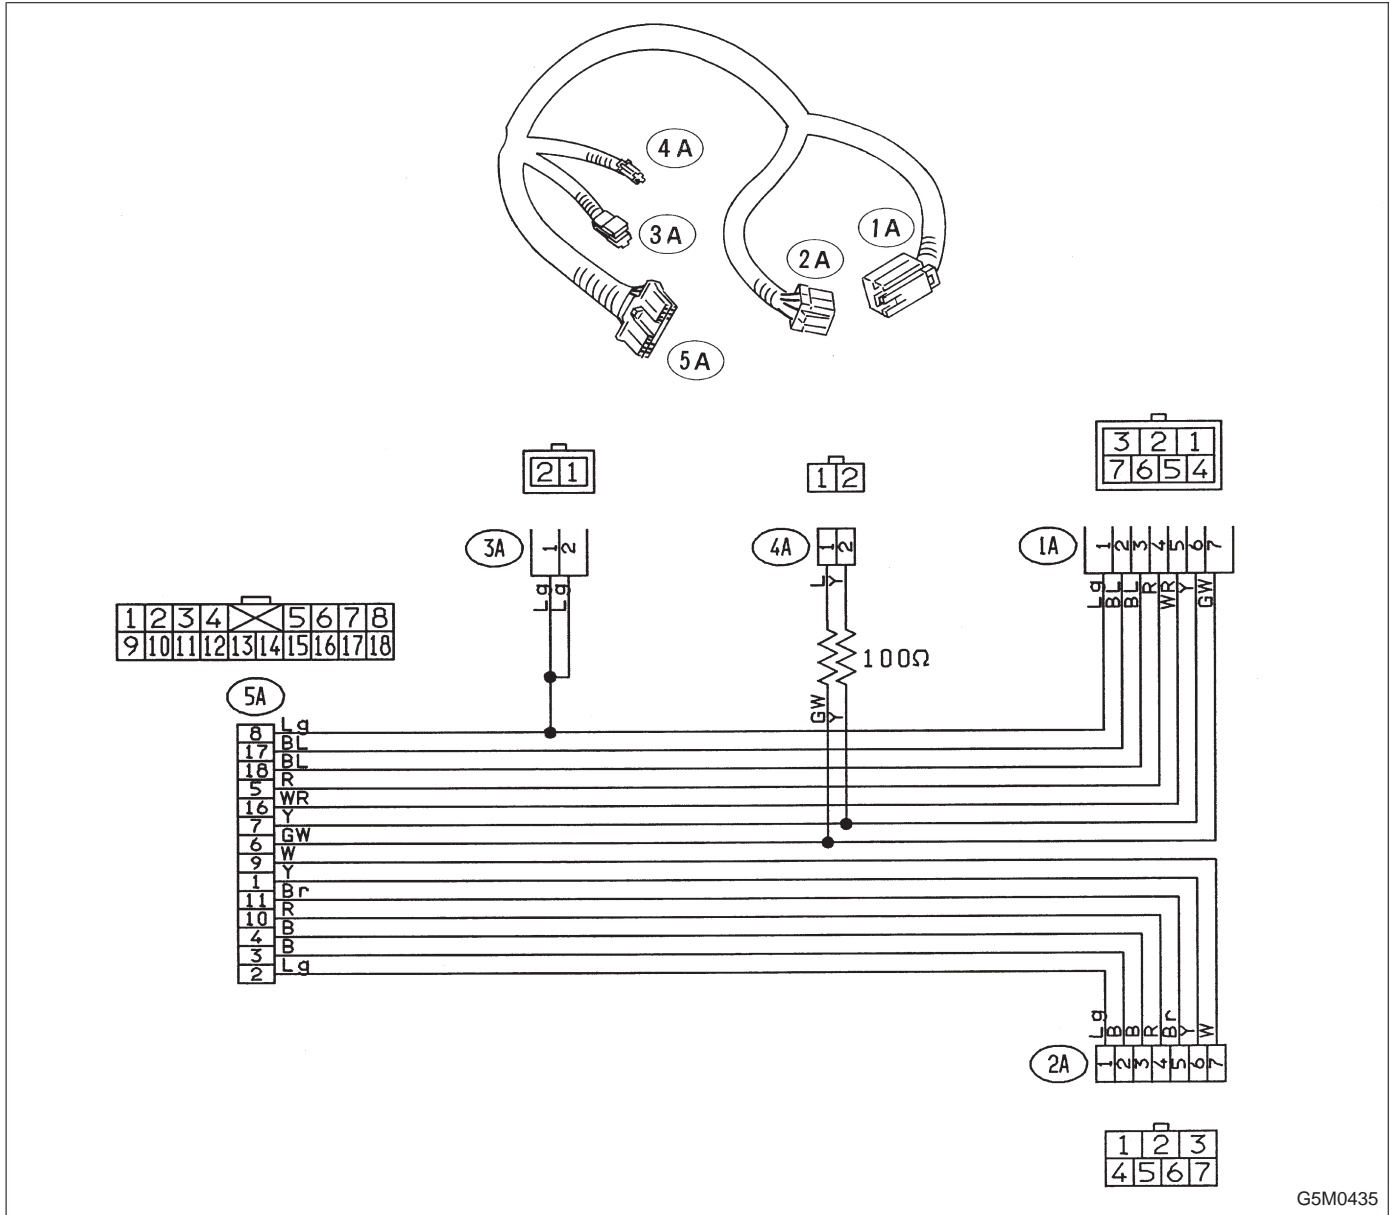


G5M0435

B: TEST HARNESS B (PN98299PA010)

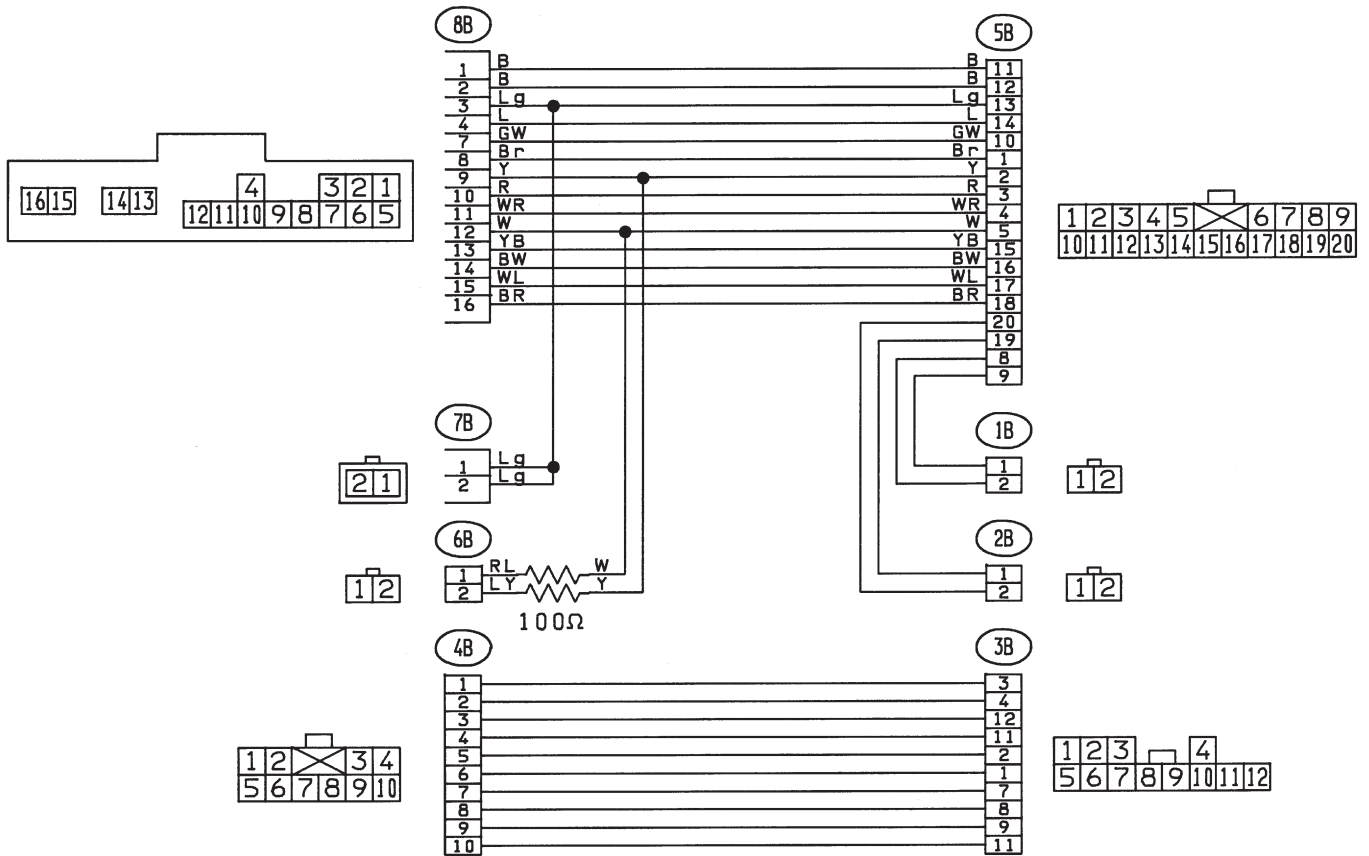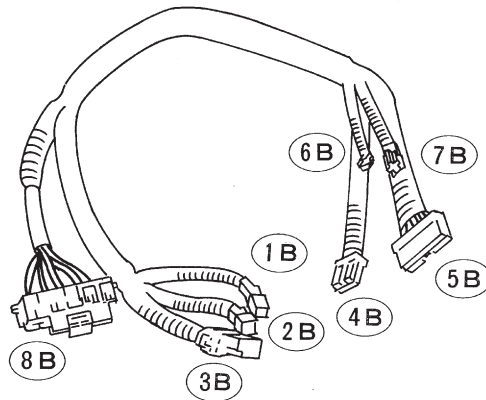


C: TEST HARNESS C (PN98299PA020)

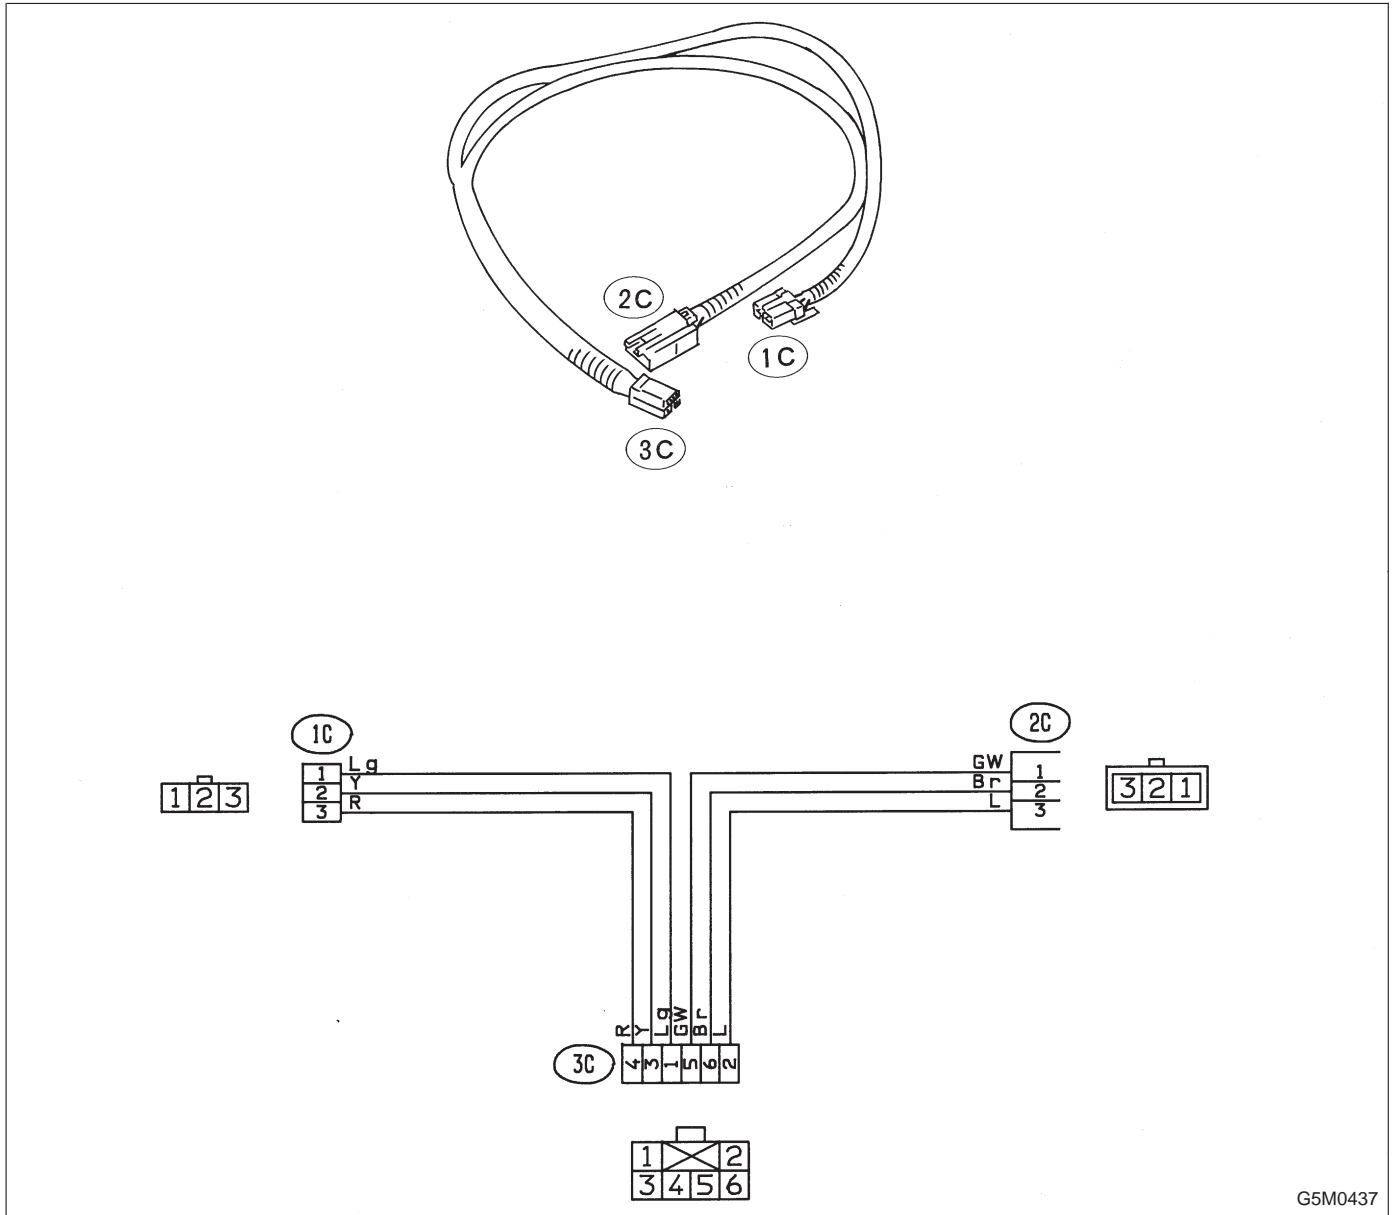

G5M0437

D: AIRBAG RESISTOR (PN98299PA040)

The airbag resistor is used during diagnostics. The airbag resistor has the same resistance as the airbag module and thus provides safety when used instead of the airbag module. It also makes it possible to finish, diagnostics in less time.

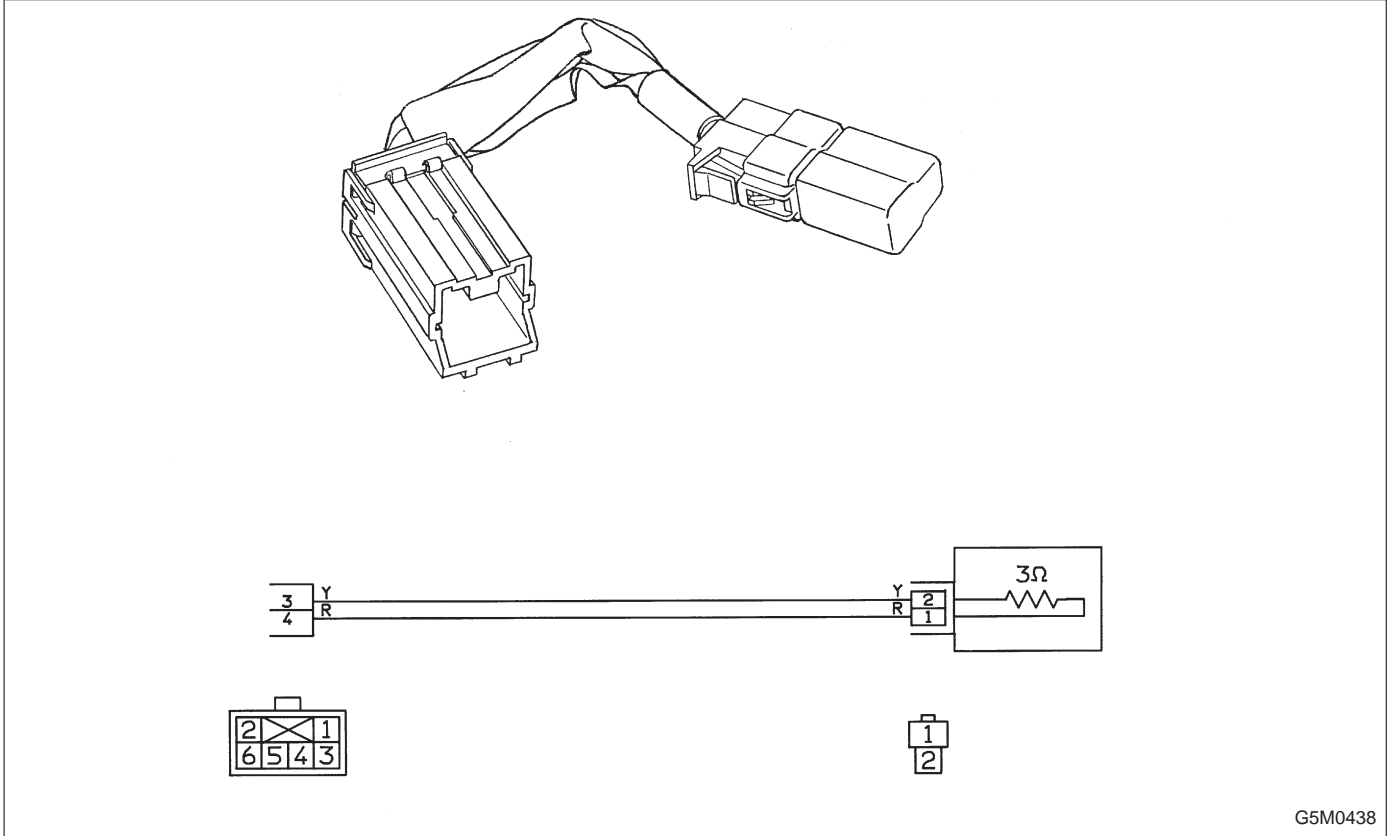

G5M0438