



### 3. Ignition Key Switch


- 1) Remove screws, separate upper column cover and lower column cover.
- 2) Remove knee protector.
- 3) Remove meter visor.

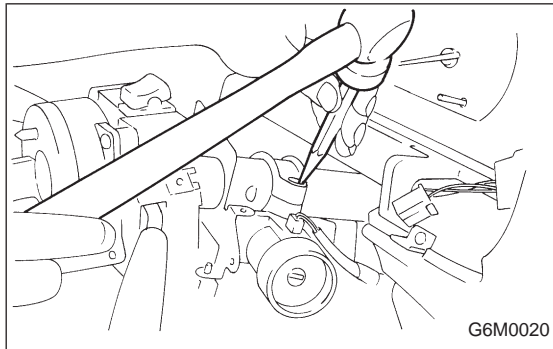

- 4) Disconnect ignition switch connector from body harness.
- 5) Using a drift and hammer, hit the torn bolt head to loosen and remove the ignition switch.

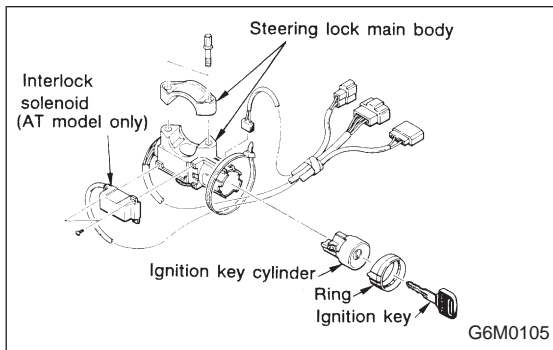

- 6) When installing, tighten the connecting bolt until its head twists off.

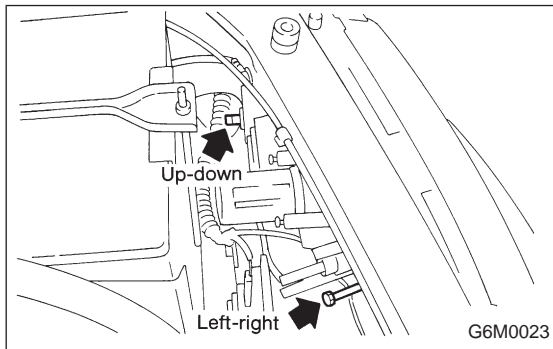

### 4. Lighting

#### A: ADJUSTMENT

##### 1. HEADLIGHT AIMING

Before checking the headlight aiming:

- Be sure that the area around the headlights has not sustained any accident damage or other type of deformation.
- Park the vehicle on level ground.
- Check the tires for correct inflation pressure.
- Make certain that the vehicle's gas tank is full and that someone is seated in the driver's seat.
- Bounce the vehicle several times to normalize the suspension.

NOTE:

- Adjust vertical aim first, then horizontal aim.
- If headlight location is slightly shifted due to body deformity, etc., repair surface to be mated with headlight. <Ref. to 5-1 [S400].>