

10. Radio, Speaker and Antenna

A: REMOVAL AND INSTALLATION

1. RADIO BODY

- 1) Remove cup holder.
- 2) Remove AT cover (AT model).
- 3) Remove screws which secure center panel. Remove center panel.
- 4) Remove fitting screws, and slightly pull radio out of instrument panel.
- 5) Disconnect electric connectors and antenna feeder cord.

2. FRONT SPEAKER


- 1) Remove door trim and disconnect connector. <Ref. to 5-2.>
- 2) Remove screws which secure front speaker. Remove speaker.

3. REAR SPEAKER (WAGON)

- 1) Remove rear quarter trim. <Ref. to 5-3.>
- 2) Remove nuts which secure speaker bracket.
- 3) Remove speaker and disconnect connector.


4. REAR SPEAKER (SEDAN)

- 1) Remove rear shelf trim panels. <Ref. to 5-3.>
- 2) Remove screws which secure rear speakers.
- 3) Disconnect connector and remove speakers.

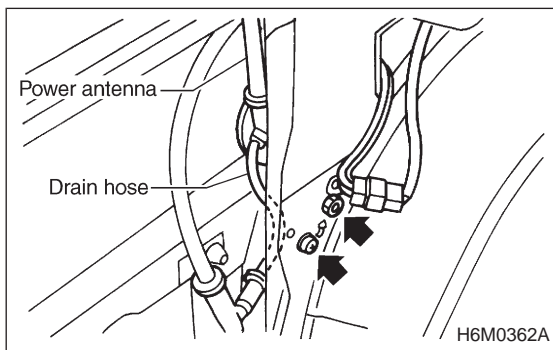

5. POWER ANTENNA

- 1) Remove left side trunk trim (SEDAN), or left side rear lower quarter trim (WAGON).
- 2) Remove nuts which secure power antenna.
- 3) Remove power antenna while disconnecting connector and water drain hose.

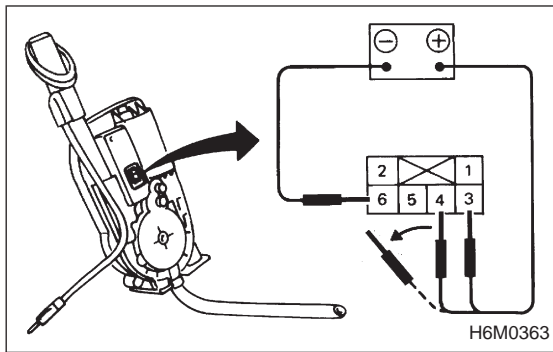**B: INSPECTION****1. POWER ANTENNA**

- 1) Connect battery positive (+) terminal to terminal No. 3 and connect terminal No. 6 to ground. Ensure that antenna rod extends properly when battery positive (+) terminal is connected to terminal No. 4.
- 2) Ensure that antenna rod retracts properly when battery positive (+) terminal is disconnected from terminal No. 4.