

## 5. Spark Plug Cord


### A: INSPECTION

Check for:

- 1) Damage to cords, deformation, burning or rust formation of terminals.
- 2) Resistance values of cords.

**Resistance value:**

- **1800 cc model**
  - #1 and #3 cords 4.95 — 11.56 kΩ
  - #2 cord 4.86 — 11.33 kΩ
  - #4 cord 5.24 — 12.23 kΩ
- **2200 cc model**
  - 5.12 — 12.34 kΩ

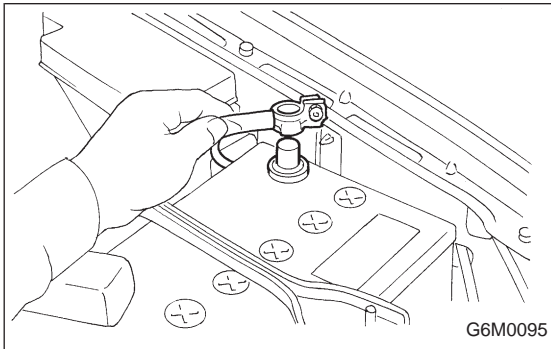

## 6. Ignitor

### A: REMOVAL AND INSTALLATION

- 1) Disconnect battery ground cable.
- 2) Disconnect connector from ignitor.
- 3) Remove screws which hold ignitor onto body.
- 4) Installation is in the reverse order of removal.

