
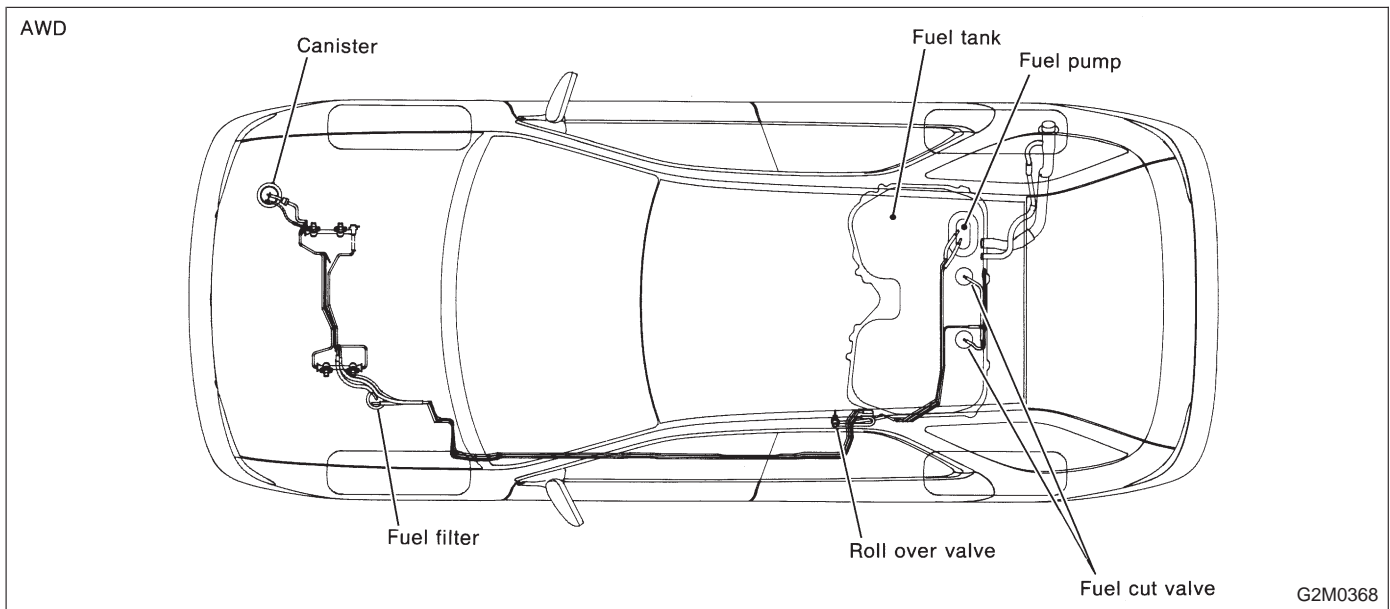




8. Fuel Delivery, Return and Evaporation Lines

A: REMOVAL


- 1) Release fuel pressure. <Ref. to 2-8 [W1A0].>
- 2) Remove inner trim, insulator and rear seat. <Ref. to 5-3 [W2A0], [W3A0].>
- 3) Remove fuel delivery pipes and hoses, fuel return pipes and hoses, and evaporation pipes and hoses.

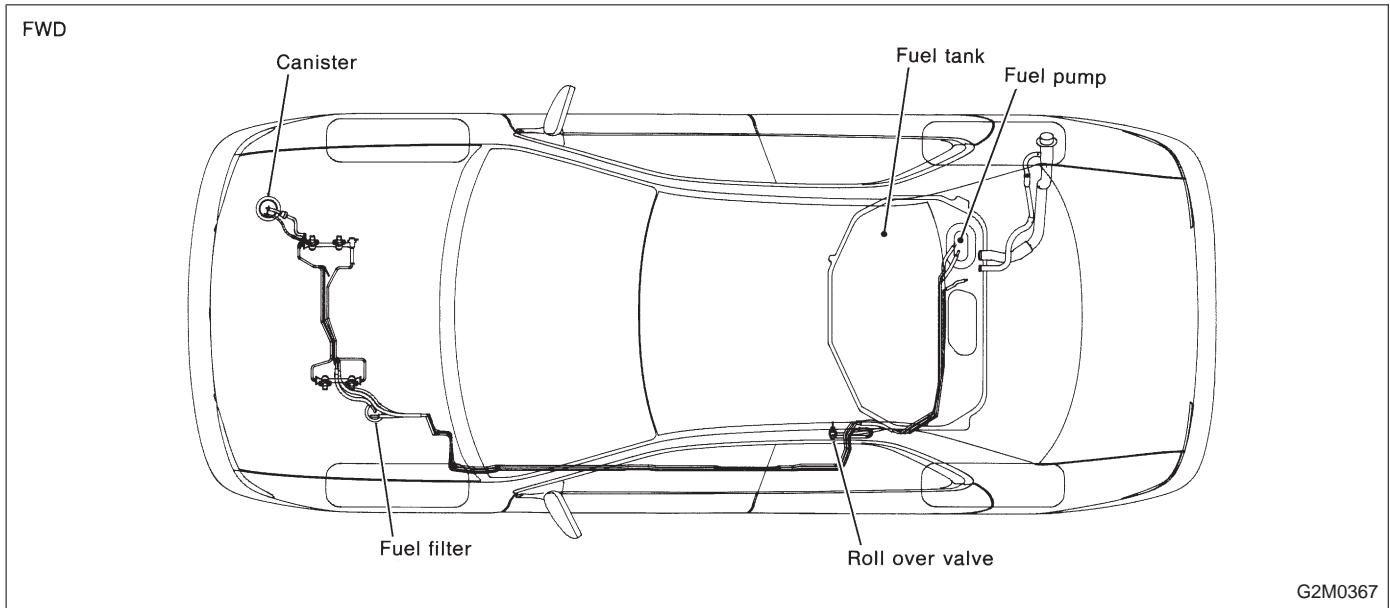


8. Fuel Delivery, Return and Evaporation Lines

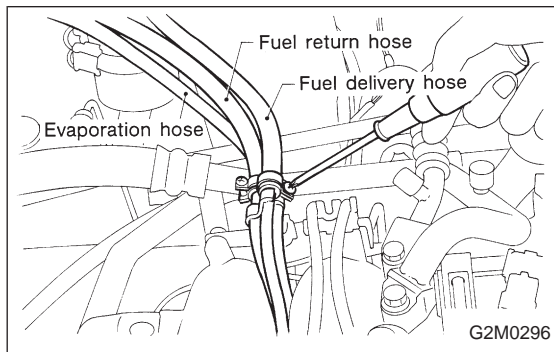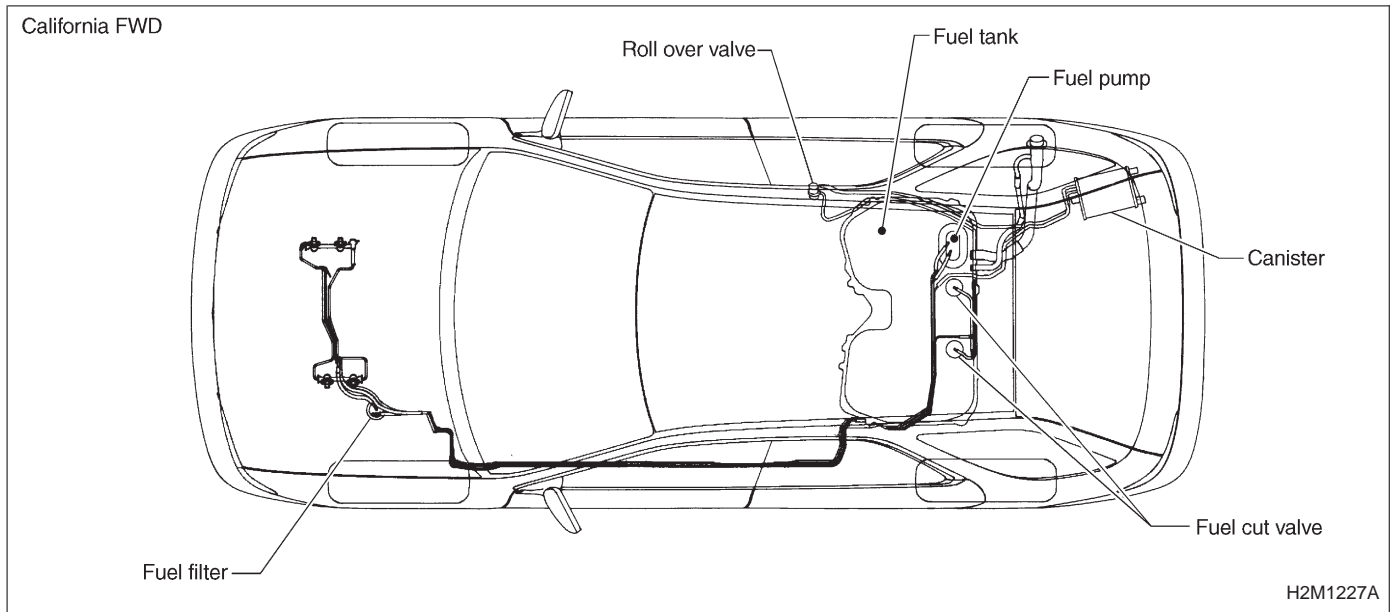

4) In engine compartment, detach fuel delivery hoses, return hoses and evaporation hose.

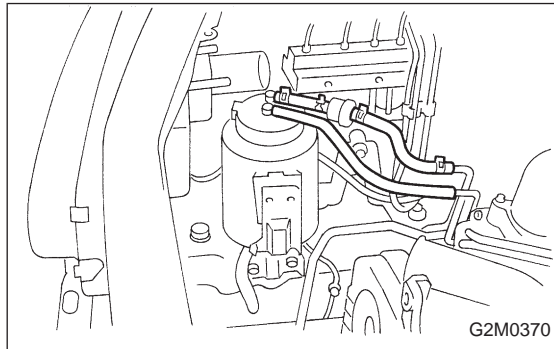

5) In engine compartment, detach canister hoses from canister. (Except California FWD model)

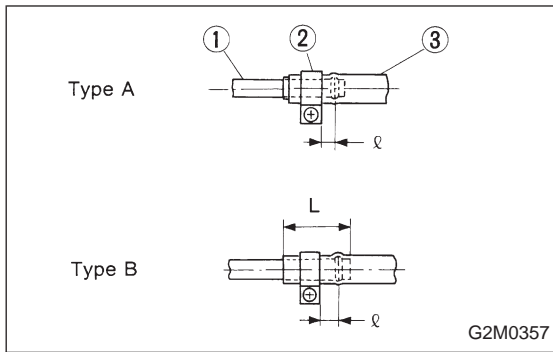

B: INSTALLATION

Installation is in the reverse order of removal.

1) Connect fuel delivery hose to pipe with an overlap of 20 to 25 mm (0.79 to 0.98 in).


Type A: When fitting length is specified.

Type B: When fitting length is not specified.

- ① Fitting
- ② Clamp
- ③ Hose

ℓ : 1.0 — 4.0 mm (0.04 — 0.16 in)

L: 20 — 25 mm (0.79 — 0.98 in)

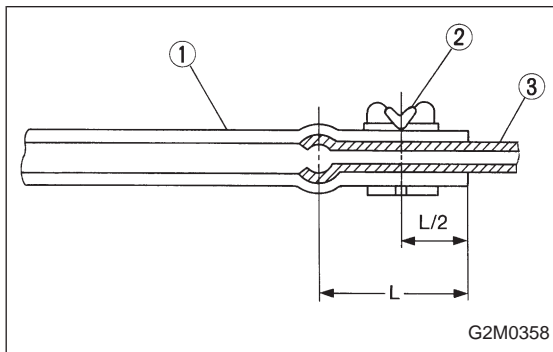


2) Connect evaporation hose to pipe by approx. 15 mm (0.59 in) from hose end.

- ① Hose
- ② Clip
- ③ Pipe

L = 15 — 20 mm (0.59 — 0.79 in)

CAUTION:

Be sure to inspect hoses and their connections for any leakage of fuel.

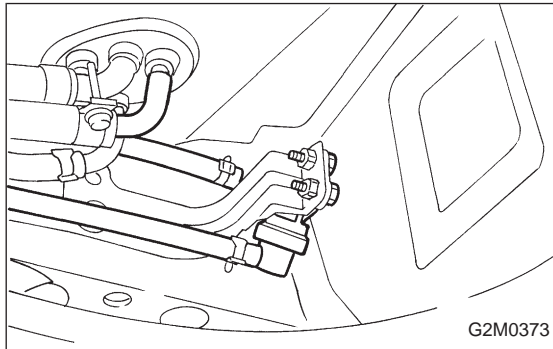

9. Roll Over Valve

A: REMOVAL

1. EXCEPT CALIFORNIA FWD MODEL

- 1) Lift up the vehicle.
- 2) Remove roll over valve with bracket.
- 3) Disconnect hoses from roll over valve, and remove it from bracket.

2. CALIFORNIA FWD MODEL

- 1) Lift up the vehicle.
- 2) Remove roll over valve from bracket.
- 3) Disconnect hoses from roll over valve.

