

B: INSTALLATION

Installation is in the reverse order of removal.

1) Connect fuel delivery hose to pipe with an overlap of 20 to 25 mm (0.79 to 0.98 in).

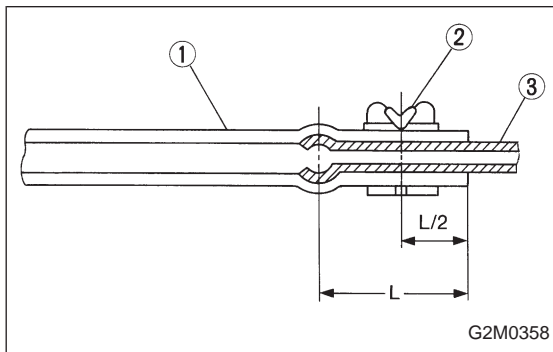
Type A: When fitting length is specified.

Type B: When fitting length is not specified.

- ① Fitting
- ② Clamp
- ③ Hose

ℓ : 1.0 — 4.0 mm (0.04 — 0.16 in)

L: 20 — 25 mm (0.79 — 0.98 in)



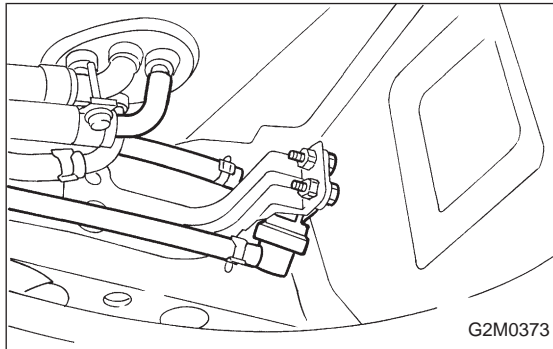
2) Connect evaporation hose to pipe by approx. 15 mm (0.59 in) from hose end.

- ① Hose
- ② Clip
- ③ Pipe

L = 15 — 20 mm (0.59 — 0.79 in)

CAUTION:

Be sure to inspect hoses and their connections for any leakage of fuel.



9. Roll Over Valve

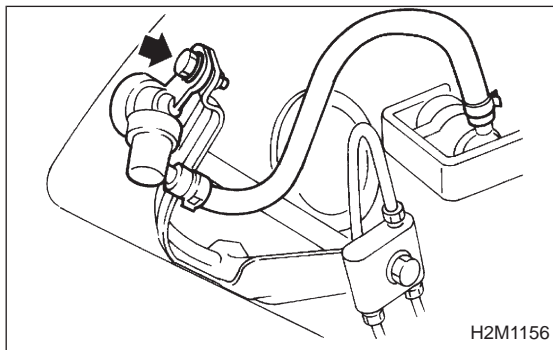
A: REMOVAL

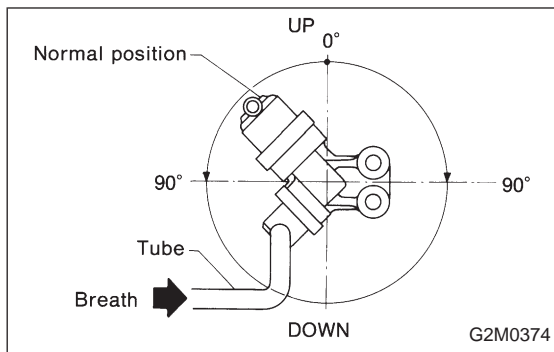
1. EXCEPT CALIFORNIA FWD MODEL

- 1) Lift up the vehicle.
- 2) Remove roll over valve with bracket.
- 3) Disconnect hoses from roll over valve, and remove it from bracket.

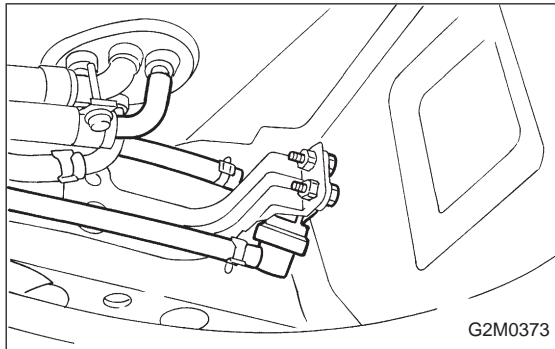
2. CALIFORNIA FWD MODEL

- 1) Lift up the vehicle.
- 2) Remove roll over valve from bracket.
- 3) Disconnect hoses from roll over valve.



**B: INSPECTION**

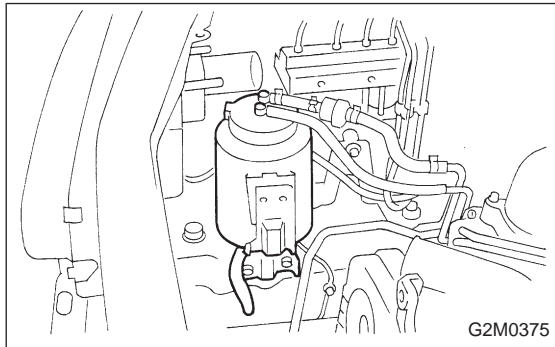
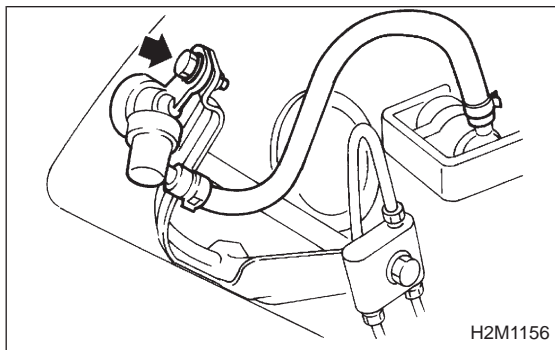
- 1) Connect hoses to roll over valve as shown in Figure.
- 2) While blowing through open end of hose, tilt valve at least 90° left and right from normal position.
- 3) Ensure that there is no air flow when hose is tilted greater than 90°.

**C: INSTALLATION**

Installation is in the reverse order of removal.

CAUTION:

- Do not install top side of valve down.
- Before installing bracket on body, securely fit concave part of bracket to hole in body.

**10. Canister****A: REMOVAL AND INSTALLATION****1. EXCEPT CALIFORNIA FWD MODEL**

- 1) Disconnect canister hoses from evaporation pipes.
- 2) Remove canister with bracket.

3) Installation is in the reverse order of removal.

CAUTION:

Insert air vent hose of canister into the hole on body.