

## 6. Discharge the System

**CAUTION:**

The following points must be kept in mind when discharging the system.


- 1) Be certain that goggles and gloves are worn.
- 2) Connect refrigerant recovery system to manifold gauge set and remove recycle refrigerant from the A/C system.

**NOTE:**


Refer to that refrigerant recovery system instruction manual for operating procedures.

### 1. CONNECTING THE MANIFOLD GAUGE SET

- 1) Close the high and low side manifold valves

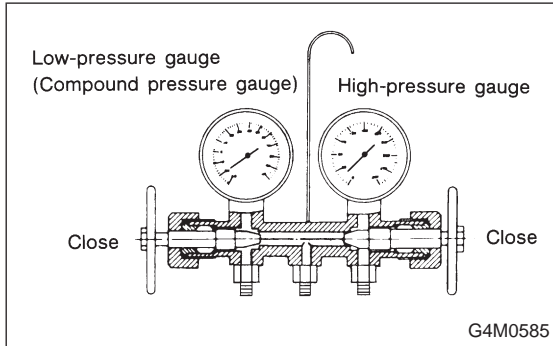

- 2) Attach the high- and low-pressure manifolds to the high and low services port on the vehicle.

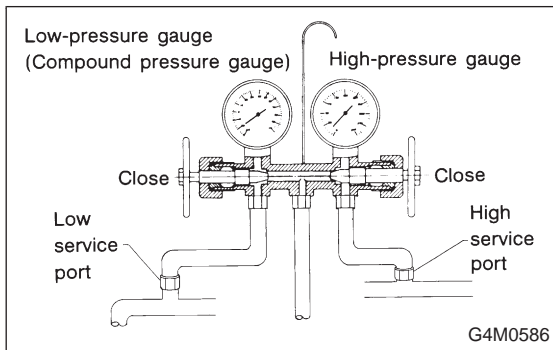

### 2. PREPARE FOR DISCHARGING

- 1) Connect center manifold hose to refrigerant recovery system to recycle refrigerant.

## 7. Evacuating and Charging

The following points should be kept in mind when evacuating and charging with a manifold gauge set:

- 1) Be certain that goggles and gloves are worn.
- 2) If bulk refrigerant [13.6 kg (30 lb) canister] is used, be certain to weigh the charge amount carefully, using the correct equipment, to avoid overcharging the system.

