

18. Brake Hose and Pipe AIRBAG

SUPPLEMENTAL RESTRAINT SYSTEM "AIRBAG"

Airbag system wiring harness is routed near the center brake pipe.

CAUTION:


- All Airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuit.
- Be careful not to damage Airbag system wiring harness when servicing the center brake pipe.

A: REMOVAL AND INSTALLATION

CAUTION:

- When removing and installing the brake pipe, make sure that it is not bent.
- After installing the brake pipe and hose, bleed the air.
- After installing the brake hose, make sure that it does not touch the tire or suspension assembly, etc.

1. MODELS WITHOUT A.B.S.

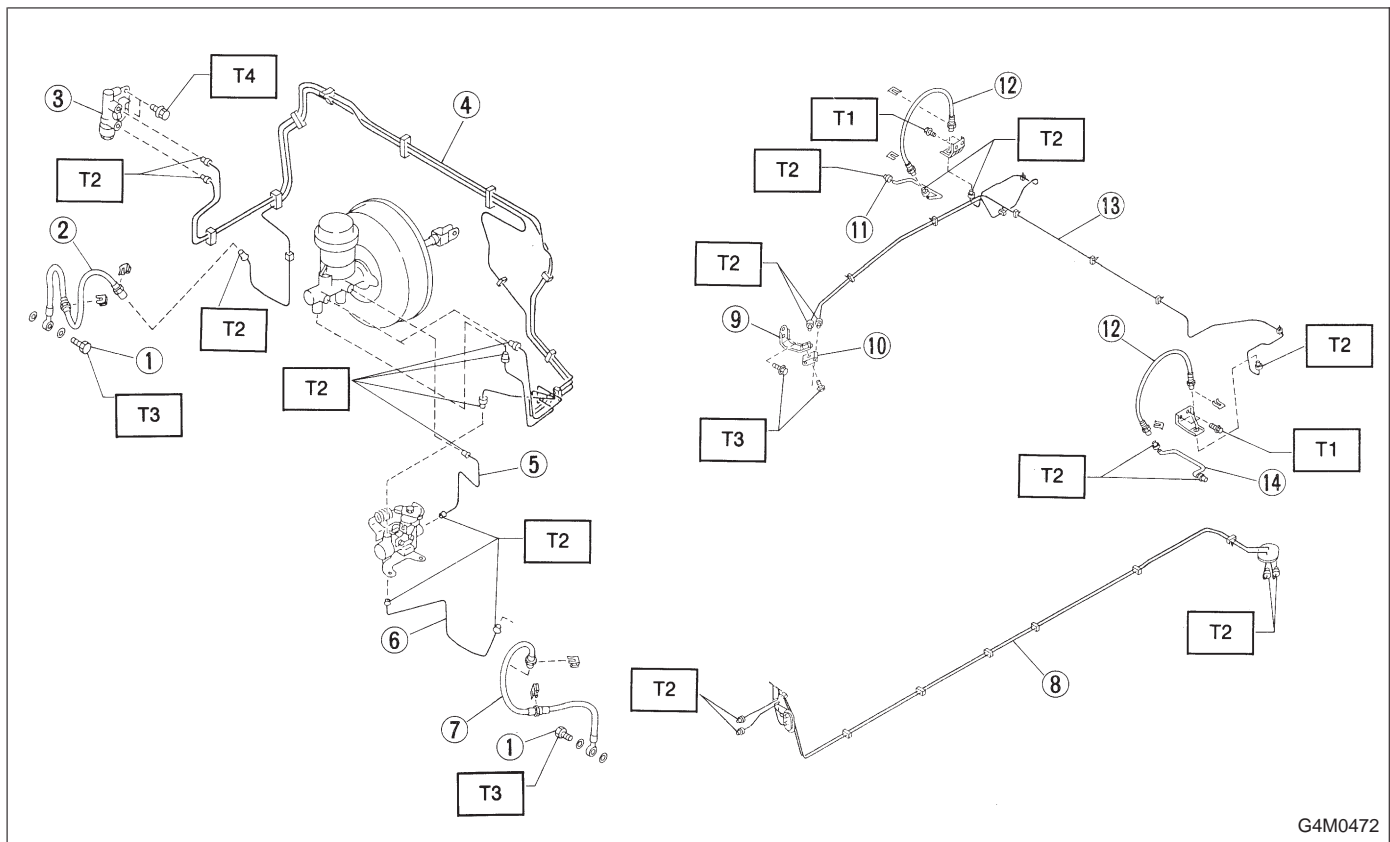


G4M0472

- | | |
|------------------------------|--------------------------|
| ① Union bolt | ⑥ Center brake pipe ASSY |
| ② Front brake hose RH | ⑨ Connector bracket |
| ③ Proportioning valve | ⑩ Two-way connector |
| ④ Front brake pipe | ⑪ Rear brake pipe RH |
| ⑤ Front adapter pipe (UPPER) | ⑫ Rear brake hose drum |
| ⑥ Front adapter pipe (LOWER) | ⑬ Rear brake pipe ASSY |
| ⑦ Front brake hose LH | ⑭ Rear brake pipe LH |

Tightening torque: N·m (kg·m, ft·lb)

- T1: 13±3 (1.3±0.3, 9.4±2.2)
 T2: 14.7⁺³₋₂ (1.5^{+0.3}_{-0.2}, 10.8^{+2.2}_{-1.4})
 T3: 18±3 (1.8±0.3, 13.0±2.2)
 T4: 18±5 (1.8±0.5, 13.0±3.6)

2. MODELS WITH A.B.S.

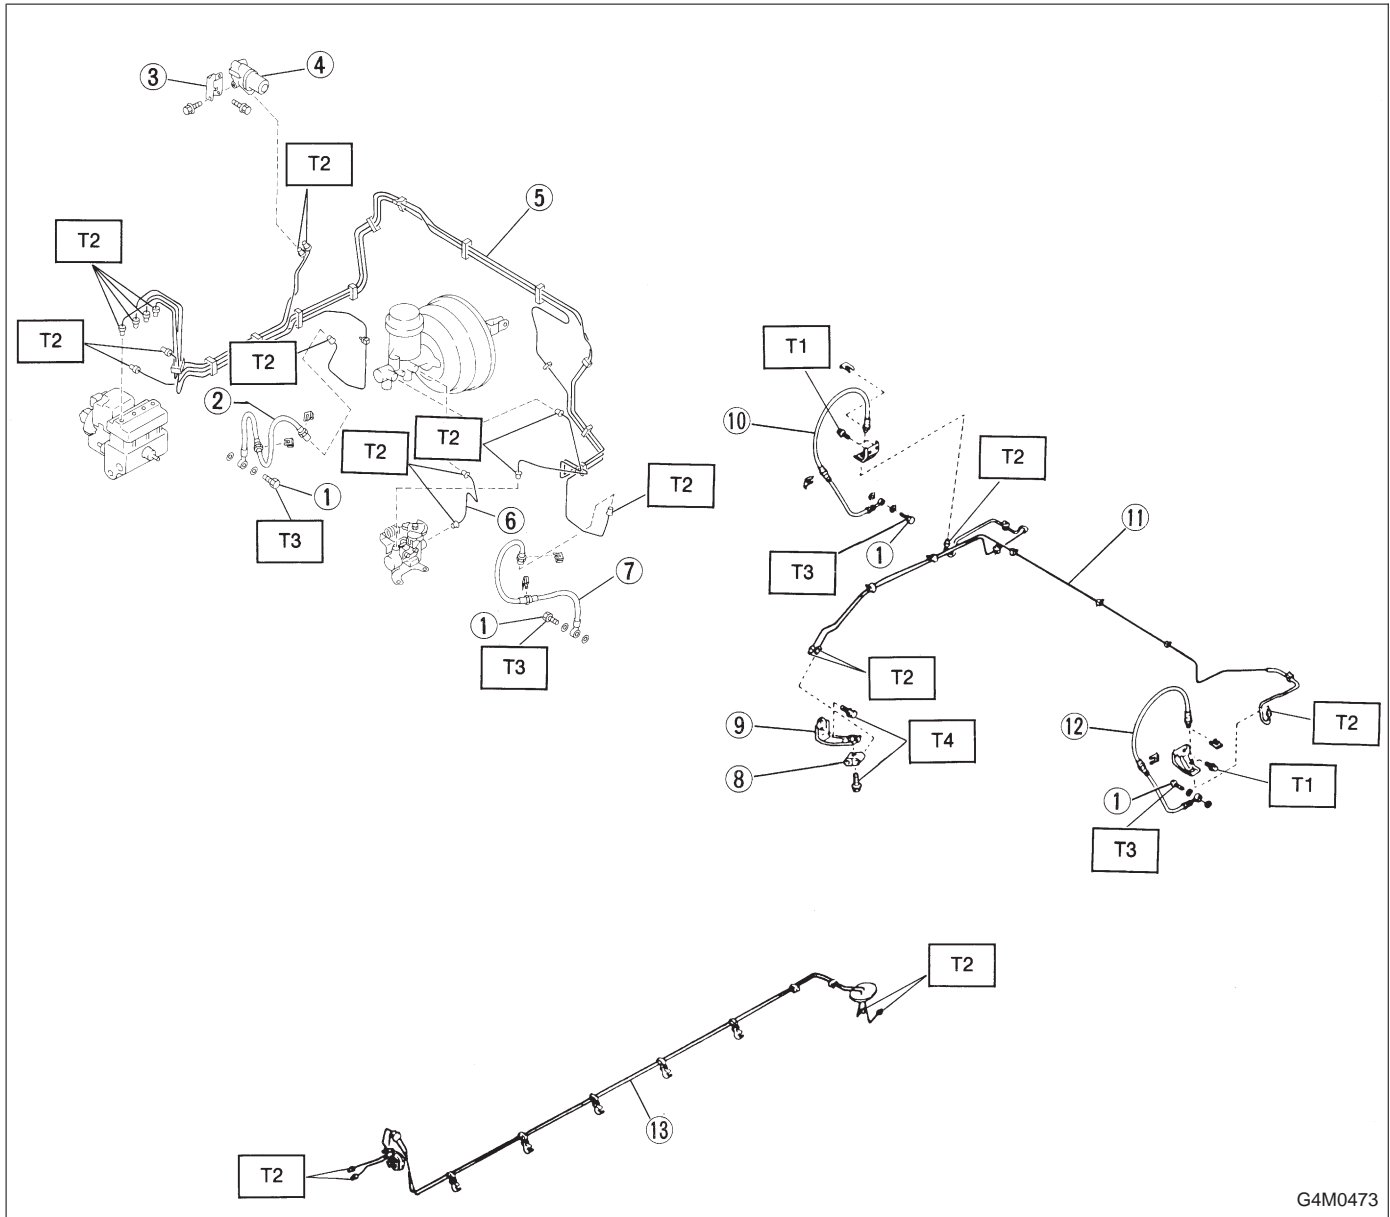

G4M0473

- | | |
|-------------------------|--------------------------|
| ① Union bolt | ⑧ Two-way connector |
| ② Front brake hose RH | ⑨ Connector bolt |
| ③ Valve bracket | ⑩ Rear brake hose RH |
| ④ Proportioning valve | ⑪ Rear brake pipe ASSY |
| ⑤ Front brake pipe ASSY | ⑫ Rear brake hose LH |
| ⑥ Front adapter pipe | ⑬ Center brake pipe ASSY |
| ⑦ Front brake hose LH | |

Tightening torque: N·m (kg·m, ft·lb)
T1: 13±3 (1.3±0.3, 9.4±2.2)
T2: 14.7_{-0.2}⁺³
(1.5_{-0.2}^{+0.3}, 10.8_{-1.4}^{+2.2})
T3: 18±3 (1.8±0.3, 13.0±2.2)
T4: 18±5 (1.8±0.5, 13.0±3.6)