


4. Transmission Case, Transmission Cover and Control Device

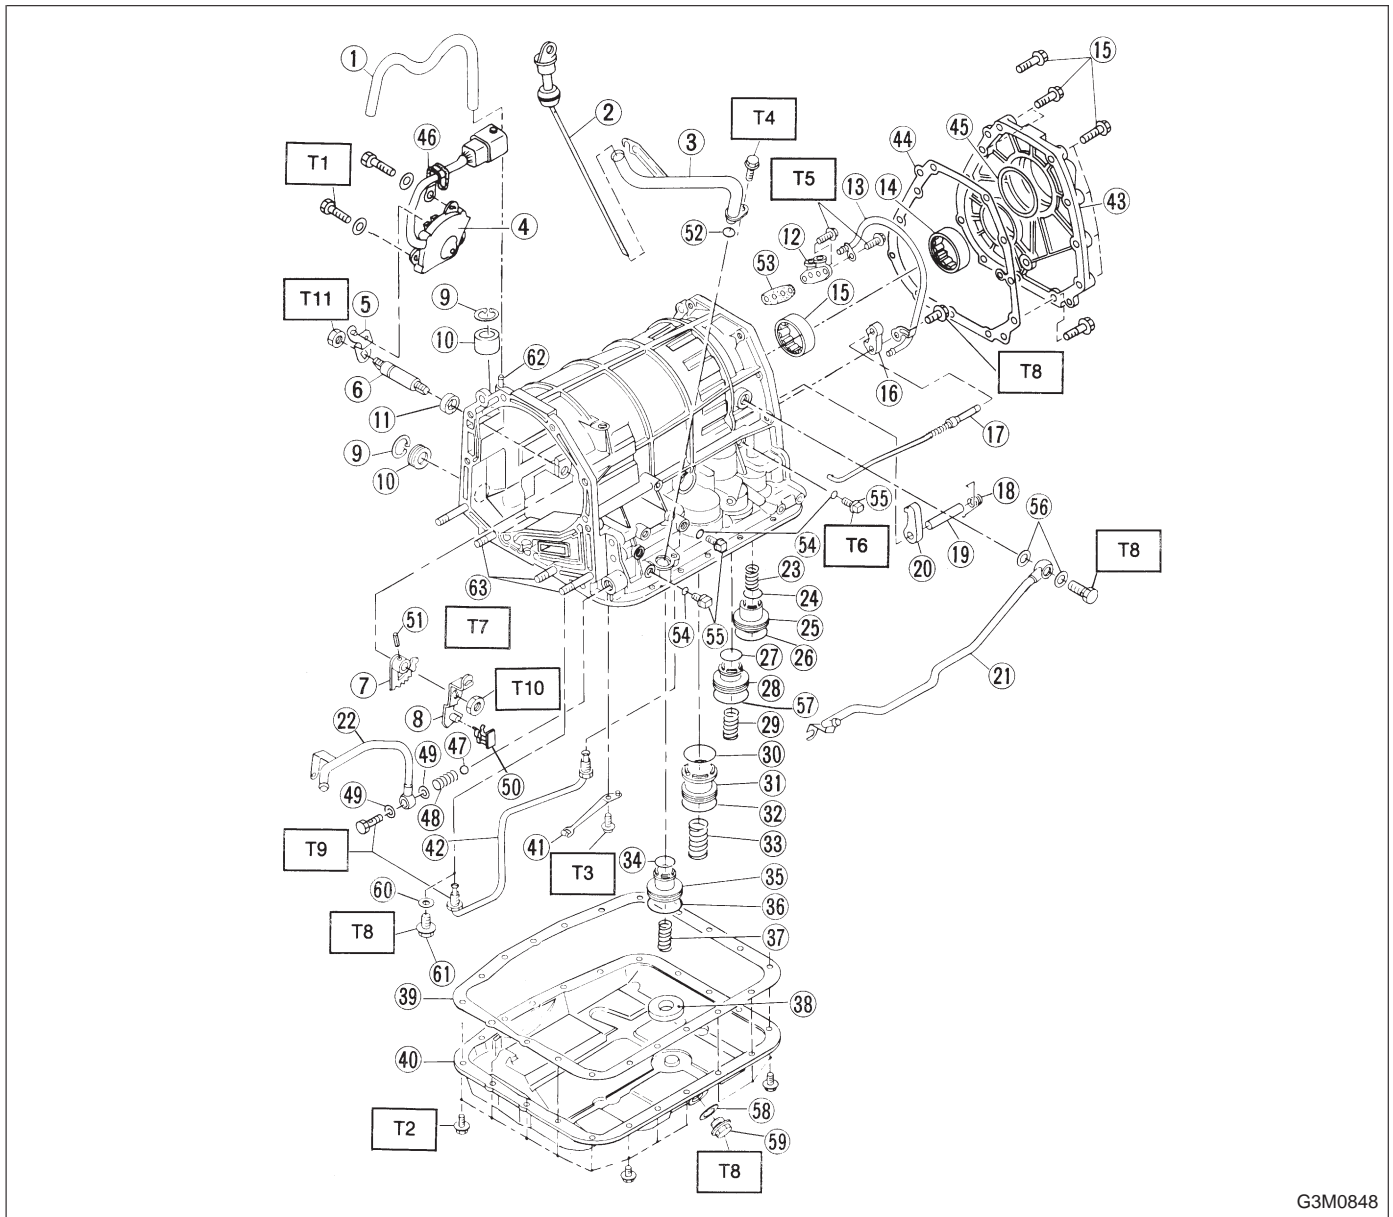

G3M0848

4. Transmission Case, Transmission Cover and Control Device

① Air breather hose	④① Oil pan
② Oil level gauge	④② Detention spring
③ Oil charger pipe	④③ Pipe (AWD model)
④ Inhibitor switch	④④ Transmission cover (FWD model)
⑤ Range select lever	④⑤ Gasket
⑥ Manual shaft	④⑥ Shim
⑦ Manual plate	④⑦ Clip
⑧ Manual lever	④⑧ Ball
⑨ Snap ring	④⑨ Spring
⑩ Plug	④⑩ Gasket
⑪ Oil seal	④⑪ Stopper
⑫ Relief valve	④⑫ Spring pin
⑬ Pipe	④⑬ Gasket
⑭ Roller bearing	④⑭ Gasket
⑮ Flange bolt	④⑮ O-ring
⑯ Parking support	④⑯ Test plug
⑰ Parking rod	④⑰ Gasket
⑱ Return spring	④⑱ O-ring
⑲ Shaft	④⑲ Gasket
⑳ Parking pawl	④⑳ Drain plug
㉑ Inlet pipe	④㉑ Gasket (FWD model)
㉒ Outlet pipe	④㉒ Plug (FWD model)
㉓ Spring	④㉓ Nipple
㉔ O-ring	④㉔ Stud bolt
㉕ Accumulator piston (N-D)	
㉖ O-ring	
㉗ O-ring	
㉘ Accumulator piston (2-3)	
㉙ Spring	
㉚ O-ring	
㉛ Accumulator piston (1-2)	
㉜ O-ring	
㉝ Spring	
㉞ O-ring	
㉟ Accumulator piston (3-4)	
⑳ O-ring	
㉑ Spring	
㉒ Magnet	
㉓ Gasket	

Tightening torque: N·m (kg·m, ft·lb)**T1: 3.4±0.5 (0.35±0.05, 2.5±0.4)****T2: 4.9±0.5 (0.50±0.05, 3.6±0.4)****T3: 6±1 (0.6±0.1, 4.3±0.7)****T4: 6.4±0.5 (0.65±0.05, 4.7±0.4)****T5: 8±1 (0.8±0.1, 5.8±0.7)****T6: 13±1 (1.3±0.1, 9.4±0.7)****T7: 18±3 (1.8±0.3, 13.0±2.2)****T8: 25±2 (2.5±0.2, 18.1±1.4)****T9: 30.9±3.4 (3.15±0.35, 22.8±2.5)****T10: 47±2 (4.8±0.2, 34.7±1.4)****T11: 34±3 (3.5±0.3, 25.3±2.2)**