
6. Main Shaft Assembly

1. AWD MODEL

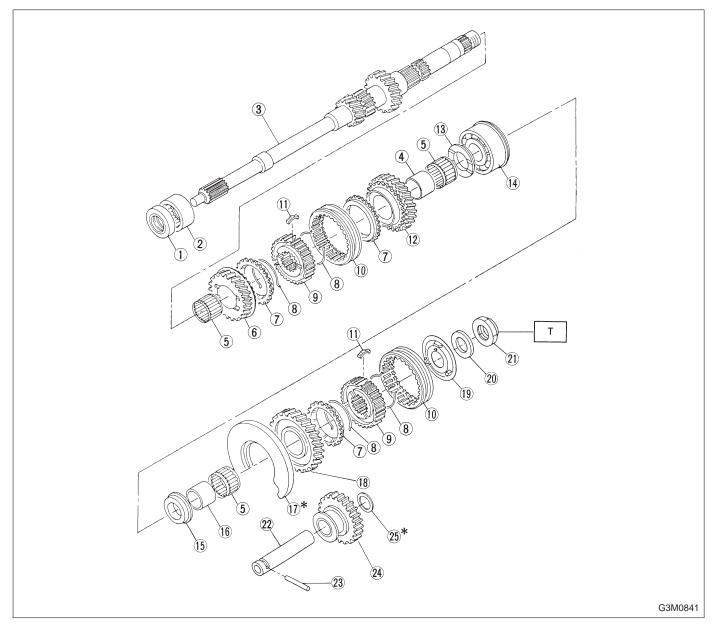

- (1) Oil seal
- Needle bearing
- Transmission main shaft
- 4 4th needle bearing race
- Needle bearing
- 6 3rd drive gear
- Baulk ring
- Synchronizer spring
- Synchronizer hub
- Coupling sleeve


- (f) Shifting insert
- 12 4th drive gear
- 4th gear thrust washer
- (4) Ball bearing
- (5) 5th gear thrust washer
- (f) 5th needle bearing race
- (f) Main shaft rear plate
- 5th drive gear
- Insert stopper plate
- 20 Lock washer

- ② Lock nut
- Reverse idler gear shaft
- Straight pin
- (4) Reverse idler gear
- ②5) Washer

Tightening torque: N·m (kg-m, ft-lb) T: 118±6 (12.0±0.6, 86.8±4.3)

COMPONENT PARTS

2. FWD MODEL

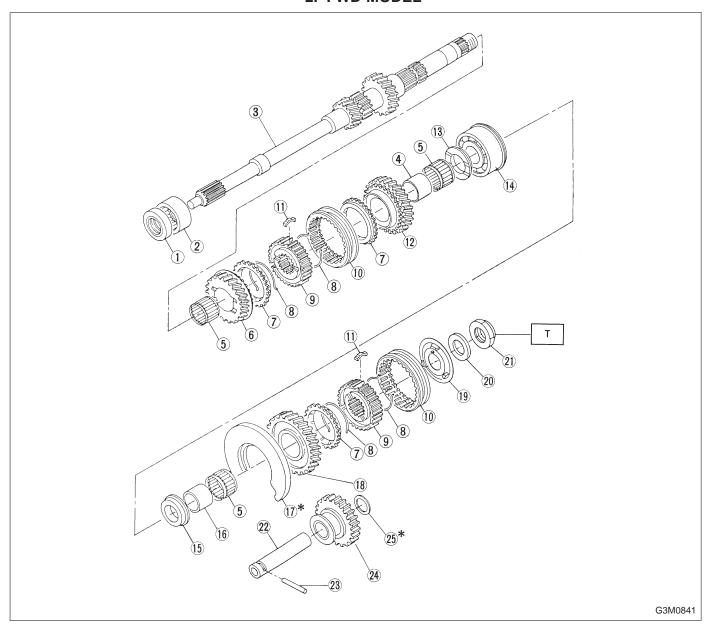

- ① Oil seal
- Needle bearing
- Transmission main shaft
- 4th needle bearing race
- Needle bearing
- 6 3rd drive gear
- Baulk ring
- Synchronizer spring
- Synchronizer hub
- (1) Coupling sleeve

- Shifting insert
- 12) 4th drive gear
- (1) 4th gear thrust washer
- (4) Ball bearing
- (f) 5th gear thrust washer
- 16 5th needle bearing race
- (f) Main shaft rear plate
- 5th drive gear
- (9) Insert stopper plate
- 20 Lock washer

- (1) Lock nut
- Reverse idler gear shaft
- 3 Straight pin
- Reverse idler gear
- Washer

Tightening torque: N·m (kg-m, ft-lb) T: 118±6 (12.0±0.6, 86.8±4.3)