


3. Fuel Flap

A: REMOVAL AND INSTALLATION

1. FUEL FLAP

- 1) Remove bolts which hold hinge to car body, and detach fuel flap and hinge as a unit.

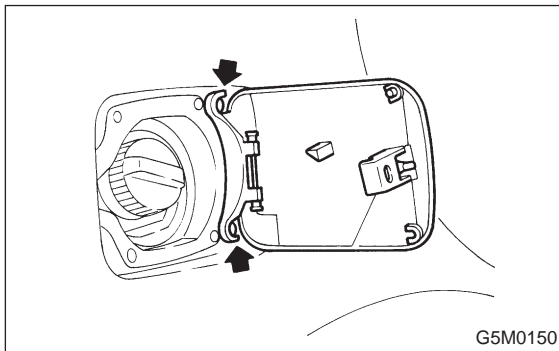


- 2) Installation is in the reverse order of removal.

CAUTION:

Make sure the clearance between fuel flap and car body is equal at all points.

2. FUEL FLAP OPENER

- 1) Remove driver's seat, rear seats, center pillar lower cover, floor mat, rear arch cover/rear quarter trim (wagon), and side sill cover (on the driver's side).
- 2) Remove all clips which hold cable.
- 3) Disconnect cable from pull handle.
- 4) Detach pull handle by removing bolts.

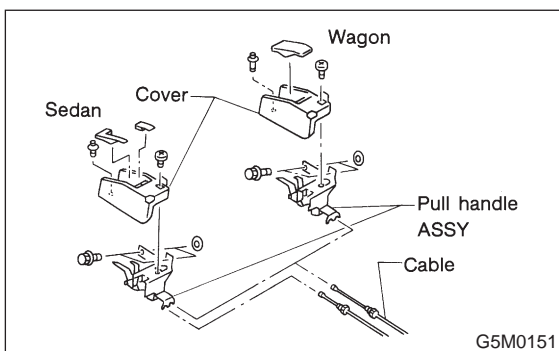

- 5) Detach fuel lock holder by turning it.
- 6) Installation is in the reverse order of removal.


CAUTION:

- When installing cover to pull handle assembly, observe the following:
 - Be careful not to catch harness.
 - Engage pull handle assembly pawls firmly.
- After installing opener cable, ensure it moves smoothly.


4. Front Bumper

A: REMOVAL AND INSTALLATION

- 1) Disconnect the ground cable from the battery.
- 2) Remove the canister.
- 3) Remove the front grille.
- 4) Remove the parking light and headlight LH.
- 5) Remove the mud guard.
- 6) Remove bolts from side of bumper.

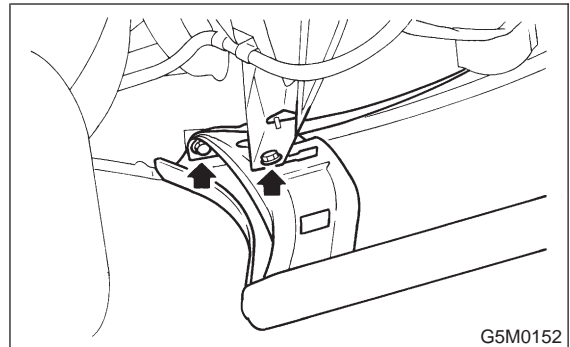

- 7) Remove bolt from lower center of bumper.

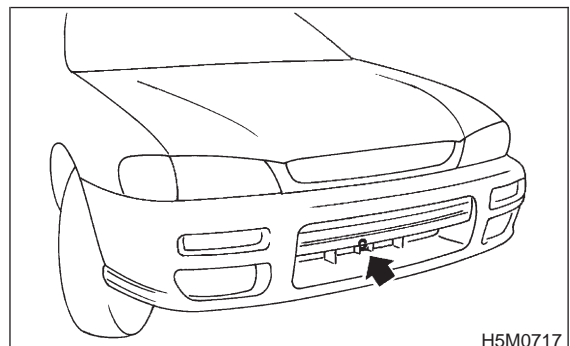

- 8) Remove bolts from lower side of bumper.

