



9) Remove bolts (engine compartment side) from bumper stays.

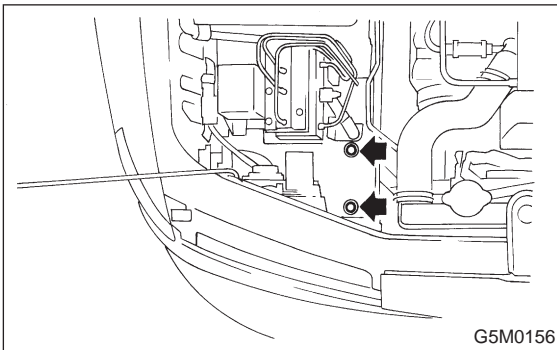

10) Remove turn signal light connector.  
11) Remove bumper assembly.

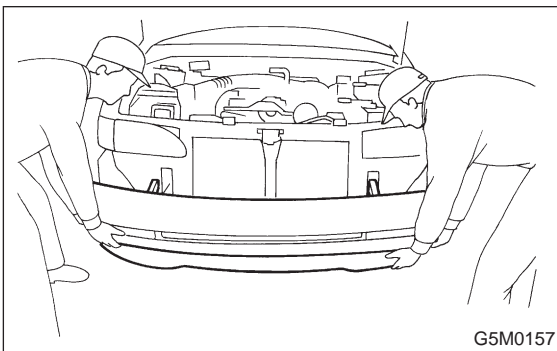


12) Installation is in the reverse order of removal.

**CAUTION:**

- Be extremely careful to prevent scratches on bumper face as it is made of resin.
- Be careful not to scratch the body when removing or installing the bumper.
- When installing canister, insert air vent hose of canister into the hole on body.

**NOTE:**

To facilitate installation of front bumper, attach hook (located at stay) to body panel.

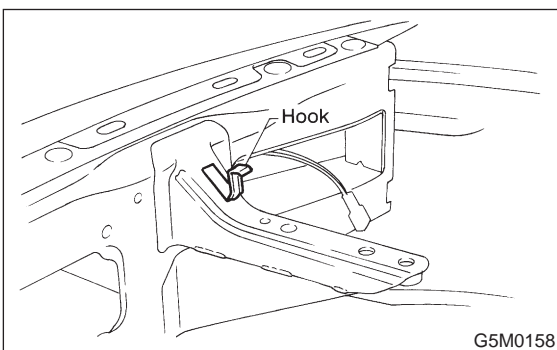


## 5. Rear Bumper


### A: REMOVAL AND INSTALLATION

#### 1. SEDAN


- 1) Open trunk lid. Remove trunk trim panel clips and detach trim.
- 2) Disconnect license plate light connector.
- 3) Remove bolts from side of bumper.

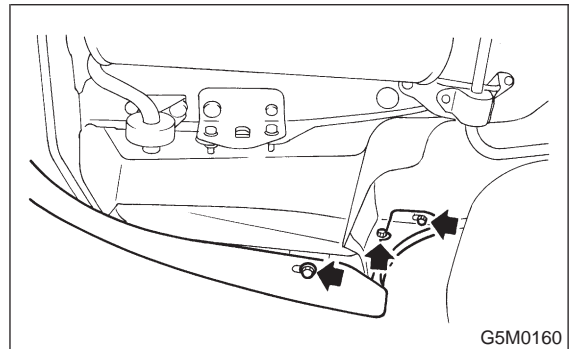

4) Remove bolts from bumper stay.

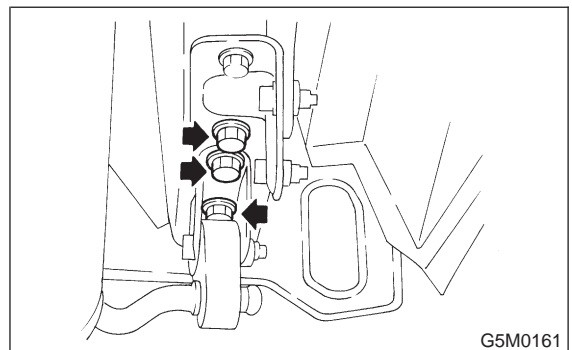

5) Remove rear bumper.

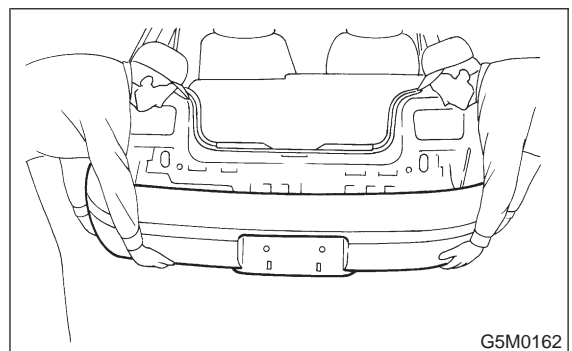


6) Installation is in the reverse order of removal.

**CAUTION:**

- Be extremely careful to prevent scratches on bumper face as it is made of resin.
- Be careful not to scratch the body when removing or installing bumper.

**NOTE:**

To facilitate installation of rear bumper, attach hook (located at stay) to body panel.

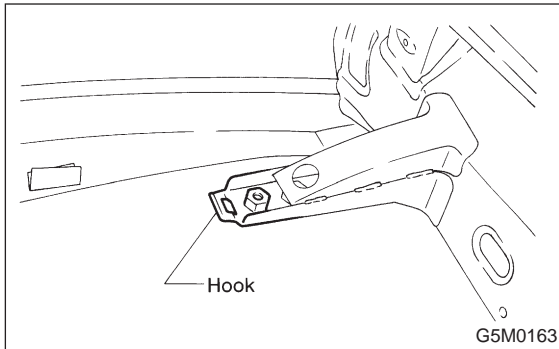


6) Installation is in the reverse order of removal.

**CAUTION:**

- Be extremely careful to prevent scratches on bumper face as it is made of resin.
- Be careful not to scratch the body when removing or installing bumper.

**NOTE:**

To facilitate installation of rear bumper, attach hook (located at stay) to body panel.

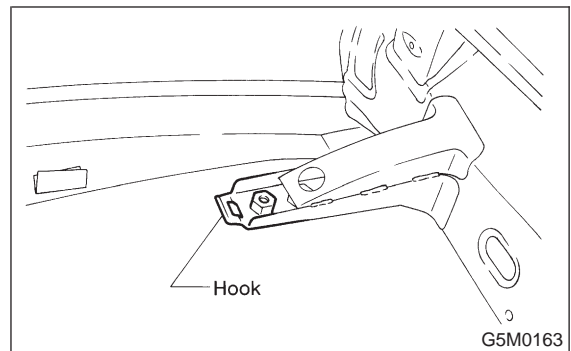

## 2. WAGON

- 1) Open rear gate and rear quarter trim lid.
- 2) Disconnect license plate light connector.
- 3) Remove bolts from side of bumper.
- 4) Remove bolts from bumper stays.
- 5) Remove bumper assembly.