


**CAUTION:**

- The left and right ELR's are not mutually interchangeable because different sensors are used.
- Be careful not to twist belts during installation.


**3. INNER BELT**

Remove anchor nut.

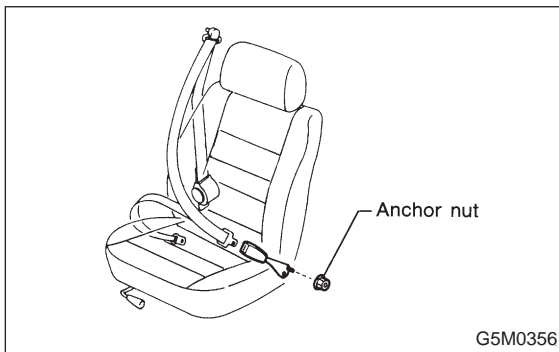

**4. ADJUSTABLE SHOULDER ANCHOR**

- 1) Remove shoulder anchor bolt.
- 2) Remove lower center pillar trim.
- 3) Remove front and front pillar trim panel.
- 4) Remove adjustable shoulder anchor assembly.

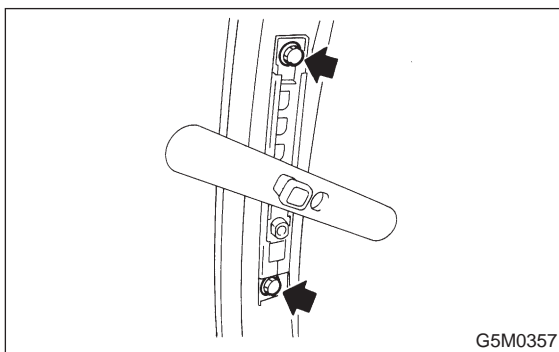


5) Installation is in the reverse order of removal.

**4. Rear Seat Belt**


**A: REMOVAL AND INSTALLATION**

**1. SEDAN AND COUPE MODEL**


- 1) Remove rear cushion from body.
- 2) Remove rear backrest from body.
- 3) Remove screw from lower side of rear quarter trim, and lift-up lower side of rear quarter trim.
- 4) Remove trim panel rear bracket upper.
- 5) Remove rear quarter trim.
- 6) Remove outer anchor bolts.

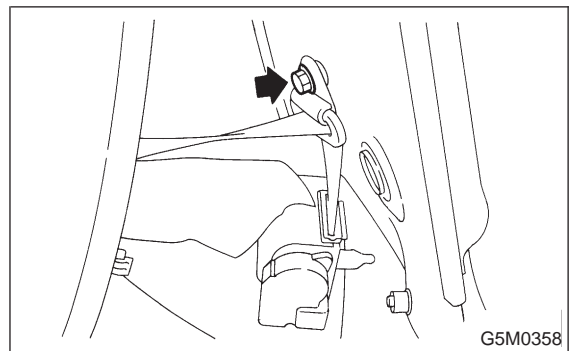

7) Remove rear bolt from ELR.

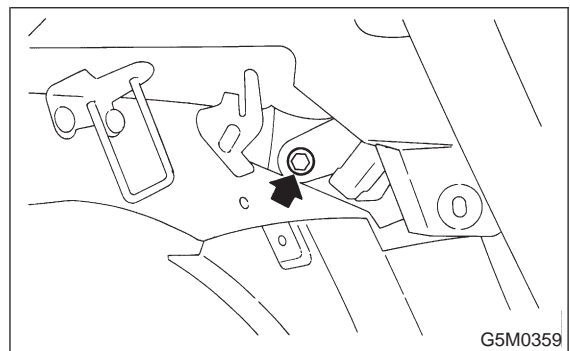

- 8) Remove belt from outlet in rear quarter along slit.
- 9) Remove inner bolts which secure outer seat.
- 10) Remove washer from bolt, then remove bolt, belt assembly, and anchor plate bracket.
- 11) Remove inner bolts (2 places) from center seat.

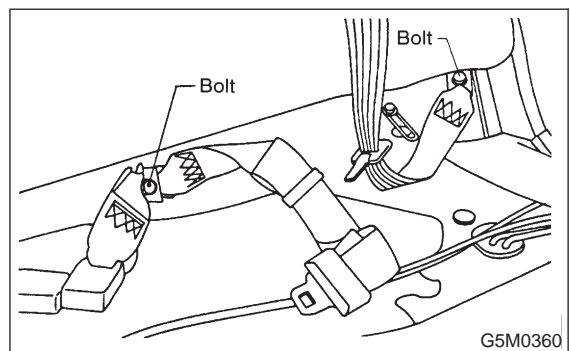

12) Remove washer from bolt, and remove bolt, belt assembly and anchor plate bracket.


13) Installation is in the reverse order of removal. Ensure that seat belt is properly reeled on and off after installation of ELR.

**CAUTION:**

- Be extremely careful not to confuse center seat anchor plate with outer seat anchor plate during installation.
- Ensure that seat belts are free from twisting after installation.
- Ensure that tongues, buckles and belts are properly placed on seat.

**2. WAGON MODEL**


- 1) Raise rear cushion.
- 2) Remove rear backrest from body.
- 3) Remove shoulder anchor cover and anchor bolt.
- 4) Remove lower portion of rear quarter trim.
- 5) Remove lap anchor cover and bolt.

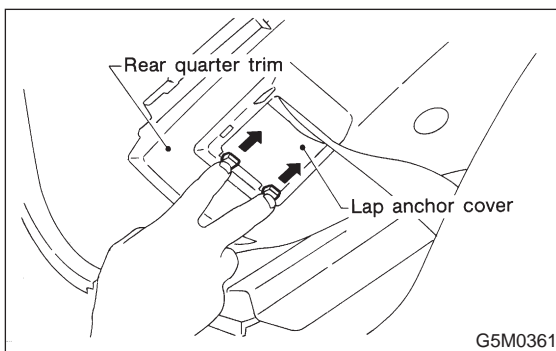

- 6) Remove 7/16-20 UNF nuts which secure ELR and remove ELR.

**CAUTION:**

Remove outer seat belt and center seat belt in similar manner used to remove those from Sedan.

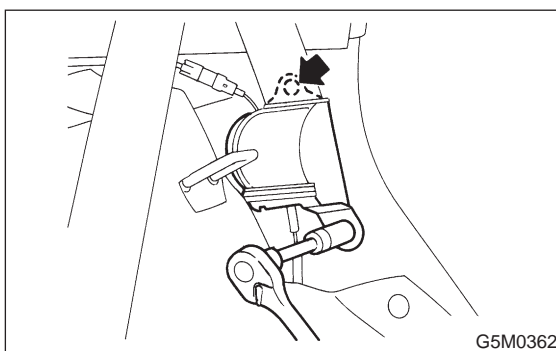

- 7) Installation is in the reverse order of removal. Ensure that seat belt is properly reeled on and off after installation of ELR.

**CAUTION:**

- Be extremely careful not to confuse center seat anchor plate with outer seat anchor plate during installation.

- Ensure that seat belts are free from twisting after installation.
- Ensure that tongues, buckles and belts are properly placed on seat.