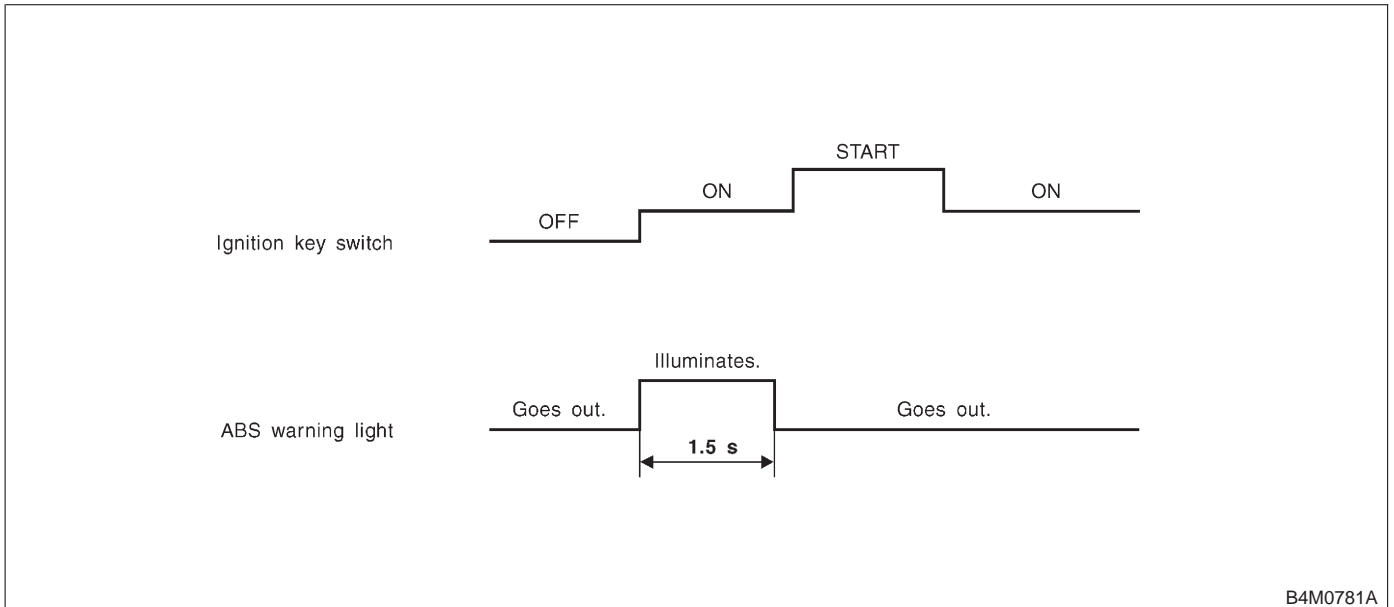



B: ELECTRICAL INSPECTION**1. WARNING LIGHT ILLUMINATION PATTERN**

- 1) When the ABS warning light does not illuminate in accordance with this illumination pattern, there must be an electrical malfunction.
- 2) When the ABS warning light remains constantly OFF, repair the ABS warning light circuit or diagnosis circuit. <Ref. to 4-4 [T7A0].>

NOTE:

Even though the ABS warning light does not go out 1.5 seconds after it illuminates, the ABS system operates normally when the warning light goes out while driving at approximately 12 km/h (7 MPH). However, the Anti-lock brakes do not work while the ABS warning light is illuminated.

3. Electrical Components Location

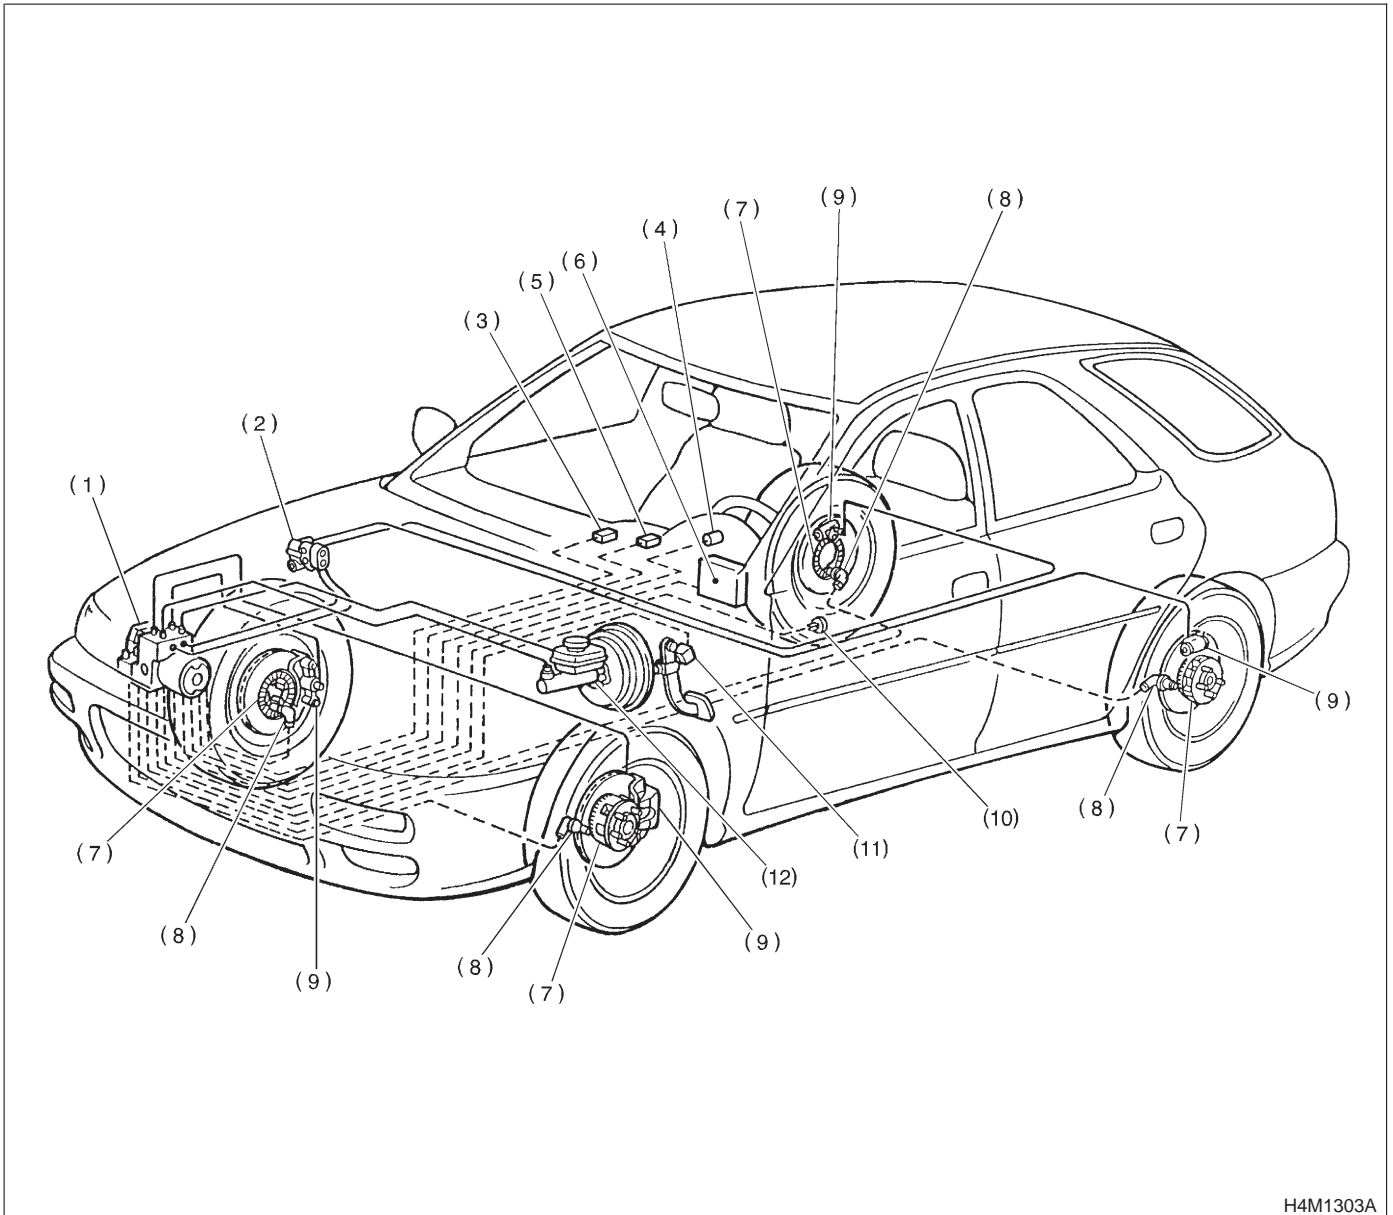

- (1) ABS control module and hydraulic control unit (ABSCM&H/U)
- (2) Proportioning valve
- (3) Diagnosis connector
- (4) ABS warning light

- (5) Data link connector (for Subaru select monitor)
- (6) Transmission control module (only AT vehicle)
- (7) Tone wheel

- (8) ABS sensor
- (9) Wheel cylinder
- (10) G sensor
- (11) Brake switch
- (12) Master cylinder

BRAKES

[T300] 4-4

3. Electrical Components Location

