



6) Connect rear oxygen sensor connector.

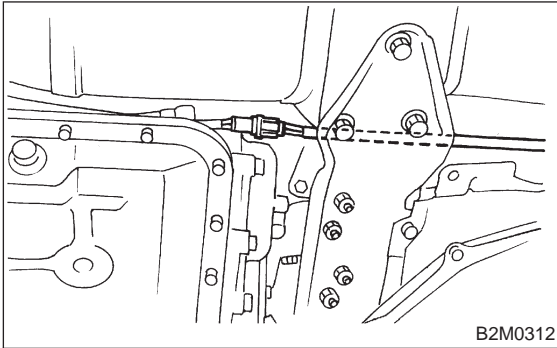


7) Install under cover.

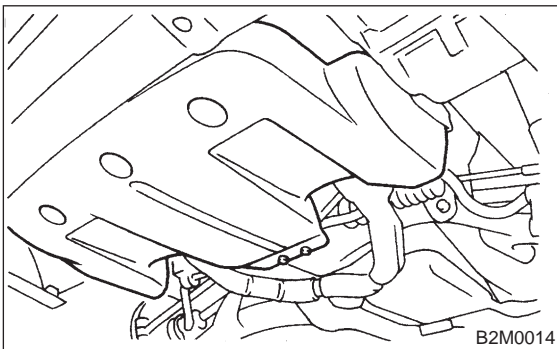


8) Lower the vehicle.

9) Connect connector to front oxygen sensor.

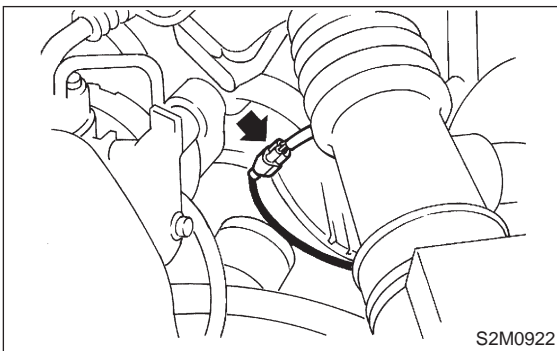

10) Connect battery ground cable.

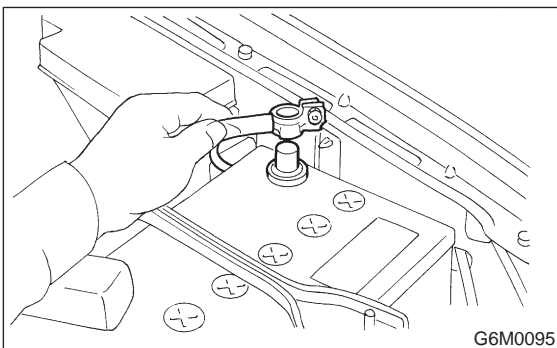

2. Rear Catalytic Converter

A: REMOVAL

Remove rear catalytic converter. <Ref. to 2-1 [W1A0].>

B: INSTALLATION

Install rear catalytic converter. <Ref. to 2-1 [W1B0].>